General Electric Company

Electronic Services - Los Angeles
M13313X

# KEITHLEY

## Instruction Manual

**Models 503, 503C**
Milliohmmeters

GENERAL ELECTRIC
INSTRUMENTATION & COMMUNICATION
1200 KONA DRIVE
COMPTON CA 90220
(213) 642-5317

**Keithley Instruments, Inc.**
28775 Aurora Road/Cleveland, Ohio 44139/(216) 248-0400

## WARRANTY

We warrant each of our products to be free from defects in material and workmanship. Our obligation under this warranty is to repair or replace any instrument or part thereof which, within a year after shipment, proves defective upon examination. We will pay local domestic surface freight costs.

To exercise this warranty, write or call your local Keithley representative, or contact Keithley headquarters in Cleveland, Ohio. You will be given prompt assistance and shipping instructions.

## REPAIRS AND CALIBRATION

Keithley Instruments maintains a complete repair and calibration service as well as a standards laboratory in Cleveland, Ohio.

A Keithley service facility at our Munich, Germany office is available for our customers throughout Europe. Service in the United Kingdom can be handled at our office in Reading. Additionally, Keithley representatives in most countries maintain service and calibration facilities.

To insure prompt repair or recalibration service, please contact your local field representative or Keithley headquarters directly before returning the instrument. Estimates for repairs, normal recalibrations and calibrations traceable to the National Bureau of Standards are available upon request.

KEITHLEY

**Keithley Instruments, Inc.**/28775 Aurora Road/Cleveland, Ohio 44139/(216) 248-0400/Telex: 98-5469
**Keithley Instruments GmbH**/Heiglhofstrasse 5/D-8000 Munchen 70/(089) 714-40-65/Telex: 521 21 60
**Keithley Instruments, Ltd.**/1, Boulton Road/GB-Reading, Berkshire RG2 ONL/(0734) 86 12 87
**Keithley Instruments SARL**/44, Rue Anatole France/F-91121 Palaiseau Cedex/01-014-22-06/Telex: (842) 204188

# INSTRUCTION MANUAL

# MODELS 503, 503C

# MILLIOHMMETERS

© COPYRIGHT 1976, KEITHLEY INSTRUMENTS, INC.

PRINTED MAY 1977, CLEVELAND, OHIO, U.S.A.

# CONTENTS


| Section | Page |
|---|---|
| SPECIFICATIONS | iv |
| 1. GENERAL DESCRIPTION | 1 |
| 2. OPERATION | 2 |
| 3. CIRCUIT DESCRIPTION | 12 |
| 4. SERVICING | 18 |
| 5. REPLACEABLE PARTS | 24 |
| SCHEMATIC | 31 |

# ILLUSTRATIONS


| Fig. No. | Title | Page |
|---|---|---|
| 1 | Front Panel. | 1 |
| 2 | Four Terminal Measurement. | 2 |
| 3 | Model 503 Controls. | 5 |
| 4 | Two-terminal Connection. | 6 |
| 5 | Modification for Unground Chassis. | 7 |
| 6 | Series Resistance Measurements. | 9 |
| 7 | Exploded View for Rack Mounting. | 11 |
| 8 | Power Supply Schematic Diagram. | 12 |
| 9 | Super Regulated 12 Volt Supply Schematic Diagram. | 13 |
| 10 | Test Current Generator Schematic Diagram. | 14 |
| 11 | AC Amplifier Schematic Diagram. | 16 |
| 12 | Synchronous Demodulator Meter - Output. | 17 |
| 13 | Waveform of Synchronous Demodulator. | 19 |
| 14 | Model 503 Internal Components Locations (Top Removed). | 21 |
| 15 | Location of Printed Circuit Board Components. | 22 |
| 16 | Location of Range Switch Components. | 23 |

# SPECIFICATIONS

| RANGE, ohms | Applied Current, milliamperes rms | Voltage Drop, microvolts rms | Maximum Dissipation in Sample, microwatts |
|---|---|---|---|
| 0.001 | 100 | 100 | 10.0 |
| 0.003 | 33.0 | 100 | 3.3 |
| 0.01 | 10.0 | 100 | 1.0 |
| 0.03 | 3.30 | 100 | 0.33 |
| 0.1 | 1.0 | 100 | 0.10 |
| 0.3 | 0.33 | 100 | 0.033 |
| 1.0 | 3.0 | 3000 | 9.0 |
| 3.0 | 1.0 | 3000 | 3.0 |
| 10 | 0.30 | 3000 | 0.9 |
| 30 | 0.10 | 3000 | 0.3 |
| 100 | 0.03 | 3000 | 0.09 |
| 300 | 0.01 | 3000 | 0.03 |
| 1000 | 0.003 | 3000 | 0.009 |

**ACCURACY**:

**Meter**: ±1% of full scale on all ranges.

**Output Terminals**: ±0.5% of full scale on all ranges.

Note: Less than 1% error is added in measuring samples with a series reactance of 2% of sample resistance.

**ZERO DRIFT**: None.

**WARM-UP TIME**: 15 minutes.

**INPUT ZERO**: Lever switch prevents off-scale meter indications while changing samples.

**RISE TIME (10% to 90%)**: 0.25 second on all ranges.

**SAFETY**: Maximum power dissipation in sample with improper range setting is 80 milliwatts. Maximum dissipation caused by instrument component failure and improper range setting is 160 milliwatts.

**REPEATABILITY**: Within 0.25% of full-scale range setting.

**CALIBRATION**: Internal resistance standard for calibration with front panel controls.

**RECORDER OUTPUT**:

**Output**: +100 millivolts dc at full scale.

**Output Resistance**: 800 ohms.

**Noise (above 10 Hz)**: Less than 1 millivolt rms.

**CONNECTORS**: Test Leads: Cannon XLR-3-32. Output: Amphenol 80-PC2F.

**POWER**: 105-125 or 210-250 volts, 50-1000 Hz, 30 watts.

**DIMENSIONS, WEIGHT**: 5½" high x 17½" wide by 13½" deep; net weight, 18 lbs.

**ACCESSORIES SUPPLIED**: Model 5031 Current and Voltage Leads; mating output connectors.

# SECTION 1. GENERAL DESCRIPTION

The Model 503 Milliohmmeter permits rapid, accurate, low resistance tests. It combines a ruggedness and ease of operation not possible with bridges. Measurements are read directly on a mirror scale meter. Balancing is unnecessary, calibration stability is excellent, and the instrument is not damaged by overload.

Features include: 13 full-scale ranges from 0.001 to 1000 ohms; accuracy of ±1% of full-scale meter indication and ±0.5% of full-scale output voltage; no zero drift; rise time of 0.25 second to 90% of final value; sample dissipation of less than 10 microwatts; 100-millivolt dc output for chart recordings or control functions; and front panel calibration.

The measurement technique involves an ammeter-voltmeter method using an ac test current.

Typical uses include measurements of internal resistance of dry cells, resistivity profiles of thermo-electric materials; measurements of temperatures with thermistors; dry-circuit testing of contacts, and safe measurement of fuses and squibs.

# SECTION 2. OPERATION

2-1. APPLICATIONS: The Keithley Model 503 Milliohmmeter is especially useful for accurate measurement of low value resistors; resistances of lead wires, terminal connector contacts and welds; resistance change in conductors due to temperature and humidity effects; resistance of ohmic junctions in semiconductors; resistivity of semiconductors, contact resistance of vibrators, relays and choppers and internal resistance of dry cells. Also for resistivity profiles of thermoelectric materials and safe measurement of squibs and fuses.

2-2. MEASUREMENT TECHNIQUE: The Model 503 measures resistance by an ammeter-voltmeter method using an ac test current. Four terminals are employed; two furnish a known test current to the sample and two measure the resultant voltage drop.(Fig. 1) The voltage is measured by a synchronous ac voltmeter sensitive only to the test current frequency.

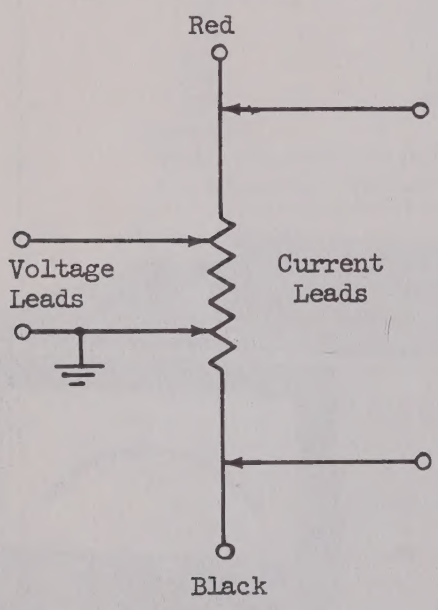


Figure 2

Most Kelvin resistance methods employ dc current to measure resistance. This method has the advantage of measuring only the resistive portion of the sample. However, due to the extremely low resistance being measured either extremely high currents must be passed through the sample or very high sensitivity dc voltmeter techniques must be used to measure the voltage drop across the sample. In the case of high current operation (which is the more common) excessive heating and damage to the sample may occur. If high sensitivity DC voltage measurement is used, extreme inaccuracy may occur because of thermal EMF's and other spurious dc disturbances. With the AC method used in the Model 503, there exists some possibility of error due to the reactive component of the sample (Section 2-18) although in most cases at 40 cps testing frequency this is negligible. However, with an ac exciting test current, thermal EMF's are eliminated and very stable high sensitivity measurements can be made so that with this AC method sample dissipation can be held 10 microwatts in measuring a 1 milliohm sample. A typical dissipation on a DC Kelvin Bridge is 1 watt for the same measurement.

2-3. ACCURACY: The accuracy of the measurement can be dependent on several factors. These are discussed in Section 2-18. The basic accuracy of the 503 is within 1% of full scale for meter indications and 0.5% for full scale output voltage.

2-4. REPEATABILITY: Having once established a reading for a particular sample measurement, it is possible to repeat within 0.25% of the full scale range setting. This assumes the connections to the sample remain fixed.

2-5. CALIBRATION: The 503 is self calibrating and thus reduces the need for resistance standards to check its accuracy. It is possible to verify the calibration with or without the sample attached to the test leads. (See Sect. 2-14)

2-6. VOLTMETER SPECIFICATIONS: Since the 503 uses a synchronous demodulator, the voltmeter is sensitive only to signals of the test current frequency. The sensitivity and input impedance are listed in Table 2.

TABLE 2

| Ranges | Rms Input for Full Scale Deflection | Z in |
|---|---|---|
| Milliohm | 100 uv | 200 ohms |
| Ohm | 3000 uv | $1 \times 10^6$ ohms |

2-7. TEST CURRENT CHARACTERISTICS: The test current is a square wave derived from the transistor inverter. The frequency is about 40 cps, and can be adjusted as discussed in Section 3-2. This may be desirable if the power line frequency is a multiple of 40 cps.

The maximum open circuit voltage is no more than 20 volts peak to peak. No more than 80 milliwatts of power can be delivered from this source.

2-8. SPEED OF MEASUREMENT: Fast measurements are possible by virtue of an overall 0.25 second response (90% full scale) of the output voltage. A zero switch on the front panel shorts the input to the voltage amplifier, thus preventing off scale indication while changing samples. Recovery from overload is almost instantaneous and normal operation can be immediately resumed.

2-9. WARM-UP: Operation within the stated specification is assured if the 503 has a 15 minute period of warm-up. It can be used within one minute, but measurements may not be within the accuracy specification.

2-10. RECORDING: Output terminals are available at the rear of the instrument. The output is +100 millivolts across approximately 800 ohms. The output noise level, above 10 cps, is less than 1 millivolt rms. This output is suitable for driving digital voltmeters and servo-rebalance recorders. The accuracy of the output is 0.5% of full scale.

2-11. POWER REQUIREMENT: The Model 503 can be powered over a range of line frequencies from 50 cps to 1000 cps. The line voltages can range from either 105 to 125 volts or 210 to 250 volts. No special connections or modifications are required to operate over the range of power line frequencies.

A three prong power line cord is provided, this is to assure proper grounding of the instrument to the power line.

2-12. CABINET OR RACK MOUNTING: The Model 503 is shipped as a bench instrument unless the order calls for rack-mounting. The Model 4000 Rack Mounting Kit adapts the instrument for standard 19-inch rack mounting. Refer to paragraph 2-18 for conversion instructions.

## 2-13. DESCRIPTION OF CONTROLS AND TERMINALS:

1. RANGE SELECTOR: The RANGE SELECTOR has six milliohm positions ranging from 1 milliohm to 300 milliohms, and seven ohm positions ranging from 1 ohm to 1000 ohms. A CAL position is provided for instrument calibration. (Fig. 3)

2. ON: Toggle switch is the main power switch. Presence of power is indicated by the illuminated front panel pilot lamp. (Fig. 3)

3. OPERATE-ZERO: This is a lever switch. With the switch in the up (operate) position the 503 is ready to take measurements. In the down (zero) position the 503 is in zero check. (Fig. 3)

4. CALIBRATE: This control is used to calibrate the meter and the output voltage of the 503. It is a recessed slotted control that can be adjusted with a screw driver. (Fig. 3)

5. VOLTAGE TERMINALS: A 3-pin male receptacle is used for connection to the voltmeter circuit. Pin No. 3 is at chassis ground. Either test lead can be plugged into this receptacle. (Fig. 3)

6. CURRENT TERMINALS: A 3-pin male receptacle is used for connection to the current source. Either test lead can be plugged into this receptacle. (Fig. 3)

7. OUTPUT: A two terminal receptacle is located at the rear of the chassis. This provides the output voltage for recording. Pin No. 2 is at chassis ground.

8. RESET (503C ONLY): This unlocks the contact circuit. A 9-pin receptacle at the rear of the chassis provides connections for operation with the contact meter.

9. OUTPUT CAL: This is a slotted control located inside the instrument on the chassis behind the front panel. This adjusts the value of the output voltage for a full scale reading.

10. MILLIOHMS CAL: This is a slotted control located inside the instrument on the chassis behind the front panel. The milliohm ranges are calibrated using this control. A low resistance standard is required for its use. This is a factory adjusted control and should not require attention.

11. FUSE: A fuse extractor post is located on the rear of the instrument. For 117 volt operation use a 3 AG, $\frac{1}{2}$ amp fuse; for 234 volts use a 3 AG, $\frac{1}{4}$ amp.

12. POWER CORD: The three-wire cord with the NEMA approved three-prong plug provides a ground connection for the cabinet. An adapter to allow operation from two prong outlets is provided.

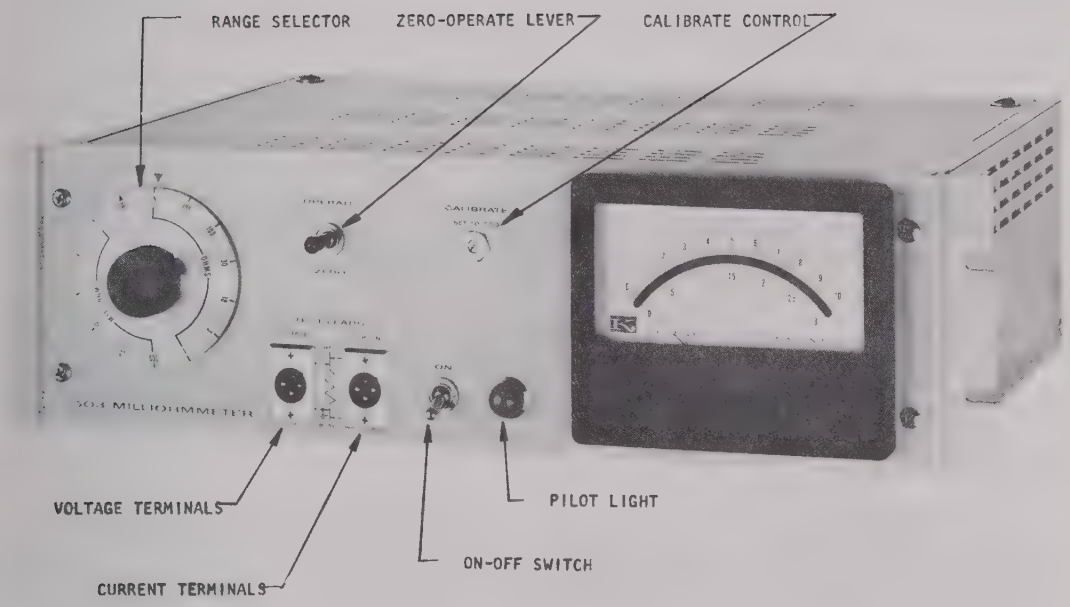


FIGURE 3. Model 503 Controls.

2-14.OUTLINE OF PROCEDURE:

1. Connect power cord to power source. A three-wire power cord is furnished with the 503. Power line voltage and frequency range are specified on the rear of the instrument.

2. Set ZERO-OPERATE lever to the ZERO position. Set RANGE SELECTOR to 1000-ohm position.

3. Turn on the power. Allow 15 minute warm-up.

4. CONNECTIONS: Each test lead set has two clips, one with a red insulator and the other with a black insulator. When making connections use both test leads, making sure clips with like color insulators are on the same side of the sample. (Refer to Figure 2) This is necessary to avoid meter readings below zero.

a. Four terminal connections: The current leads should be attached to the sample making sure the test current flows through the entire sample. This may include leads on the sample. Attach the voltage leads being sure they are connected only across that portion of the sample to be measured. If the terminals or the leads of the sample are included in the voltmeter circuit, their resistance will be included in the reading. (See Section 2-18)

b. Two terminal connections: This type connection is made by attaching together voltage and current clips having like color insulators and measuring across the sample. (Fig. 4) This type connection is permissible when measuring samples above 3 ohms. (See Section 2-18)

5. OPERATION: With the sample connected, set the ZERO-OPERATE switch to OPERATE, rotate the RANGE SELECTOR until a deflection is observed. Thus, if the RANGE SELECTOR is set at 100 milliohms and a reading of 6.3 is taken, the value of sample resistance is 63 milliohms.

If the sample is part of a system, attention should be given to the grounding of the sample. The voltage lead with the black insulator is the ground lead of the 503. (See Section 3-4)

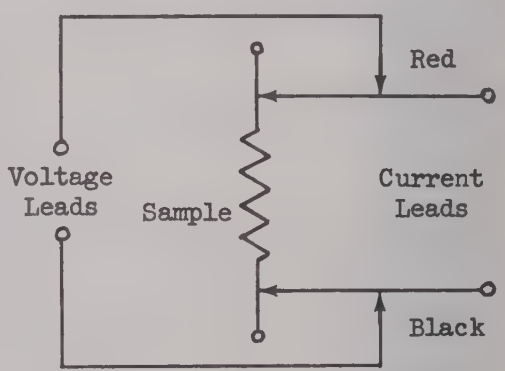


FIGURE 4. Two-terminal connection.

6. REMOVING THE SAMPLE: Place the OPERATE-ZERO switch in ZERO position and remove the sample.

2-15.CALIBRATION: Place the selector switch in CAL position. Set the OPERATE-ZERO switch to OPERATE position. Turn the slotted CALIBRATE control for needle deflection to 7.50 on the meter. The instrument can be calibrated independently of the test leads connected. (See Section 4-2.)

2-16. OUTPUT. Connect to the output terminals, observing that pin No. 2 is at ground. The 503 is designed to drive a 100 millivolt recorder. The CALIBRATE control on the front panel calibrates the output as well as the meter. An internal control R125 OUTPUT CAL is adjusted at the factory to insure tracking between the meter and the output voltage. (See Figure 14)

If it is desired to use a recorder other than 100 millivolts, the output terminals may be shunted with the following values:

| Recorder Sensitivity | Resistance Value |
|---|---|
| 50 mv | 360 ohms |
| 10 mv | 80 ohms |
| 1 mv | 360 ohms (tap output 7 ohms from ground) |

After the divider is added to the output, recalibrate the instrument on the CAL position. Adjust recorder sensitivity with R125, the internal recorder CAL control.

2-17. MEASUREMENT OF GROUNDED SAMPLES: It is possible that the test sample may be independently grounded at some point. Since the voltage test lead with the black clip insulator is at chassis ground, errors could arise in measurement.

1. TEMPORARY MEASURE FOR OCCASIONAL MEASUREMENTS: Isolate the Model 503 using a two-prong power cord adaptor to remove the ground connection to the power line. Place the instrument so that the cabinet is not touching ground. If the tilt bail is not used, the rubber feet can provide the proper insulation.

2. PERMANENT SET-UP: Should it be necessary to unground the chassis, (such as in rack use) the following modification will facilitate such measurement. The change allows the instrument to operate only on the milliohm ranges; the ohm ranges are inoperative.

Remove the chassis ground connection from pin 4 of T-1 and pin 3 of J-1. Then connect pin 3 of J-1 to pin 4 of T-1. In this way both the voltage and current test leads will be isolated from ground. (Fig. 5)

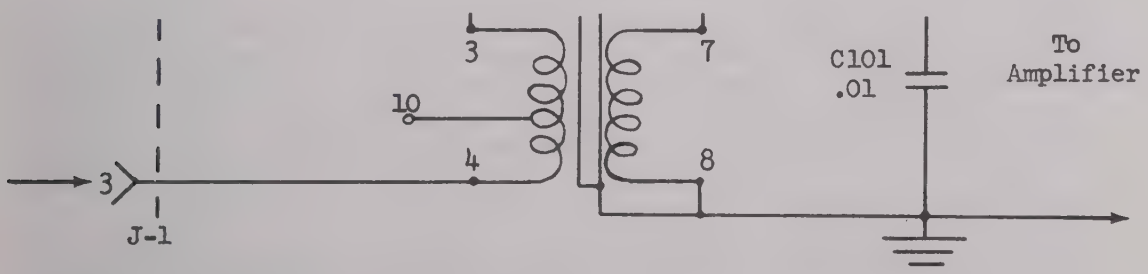


FIGURE 5. Modification for unground chassis.

2-18. ACCURACY CONSIDERATIONS:

1. MEASUREMENT IN THE PRESENCE OF DC CURRENTS: The 503 can measure resistance with dc currents present in the sample. An influencing factor is the amount of current that will saturate the voltmeter input transformer. A 1% error in measurements, using milliohm range settings, will occur if the dc current causes a 20 millivolt drop across the sample. The dc current through the sample can be increased if a capacitor is put in series with a voltmeter lead. The capacitor should be 10,000 ufd with a voltage rating greater than the dc current source voltage.

With measurements in the range from 1 ohm to 1000 ohms, a 1% error will occur if a current greater than 1 milliampere flows through the current supply circuit. The voltmeter will not be effected unless the source voltage of the dc current exceeds 50 volts.

The dc sample current which will cause 1 ma to flow in the current supply circuit may be computed from the sample resistance and the range resistor in use.

2. INDUCTIVE AND CAPACITIVE EFFECTS: The Model 503 uses an ac measuring system and synchronous demodulation to discriminate against 60 cycle pick-up and to discriminate to a degree against reactive components in the sample. Therefore, usually, no special precautions or shielding are necessary unless the ac fields in the neighborhood of the sample are unusually strong. The usual cause of trouble will be due to electro-magnetic induction. Electrostatic pick-up usually is no problem at the impedance involved. A good way to test for pick-up is to remove the current leads and leave the voltage leads attached to the sample. If no reading is seen, there is no cause of concern. If, however, there is a reading, the source of magnetic field must be removed or the sample oriented in such a way as to minimize the reading.

Because of the ac technique employed, inductive and capacitative components in the test impedance may cause some wave-form distortion and erroneous readings. In practice, it has been found that the following method will enable the user to calculate errors introduced by inductance in series with the sample or capacitance across it. Experimentally it can be shown that the error due to a series inductance or shunting capacitance is equal to about 50% of what would be calculated, assuming the shunting or series effect was due to the impedance computed for a 40 cps sine wave.

In the presence of large interfering ac fields, some needle flutter will be noted. This will be due to a beat between the 40 cps carrier frequency and the signal. The average value of the pointer indication will be the correct reading unless the interfering signal is exactly equal in frequency to the carrier. In this case large errors may be encountered. However, since a 40 cps interfering signal is rarely encountered, there will be little likelihood of trouble.

Coupling between the current and voltage leads can cause significant error on the 1 milliohm range. This can be minimized by keeping the voltage and current leads separated and by twisting the pairs of leads to reduce the enclosed area.

3. ERRORS DUE TO SERIES RESISTANCE IN CURRENT AND VOLTAGE LEADS: Series resistance may be appreciable in such cases as resistivity profile measurements, or when low resistance connections to the sample cannot be made. (See Fig. 6)

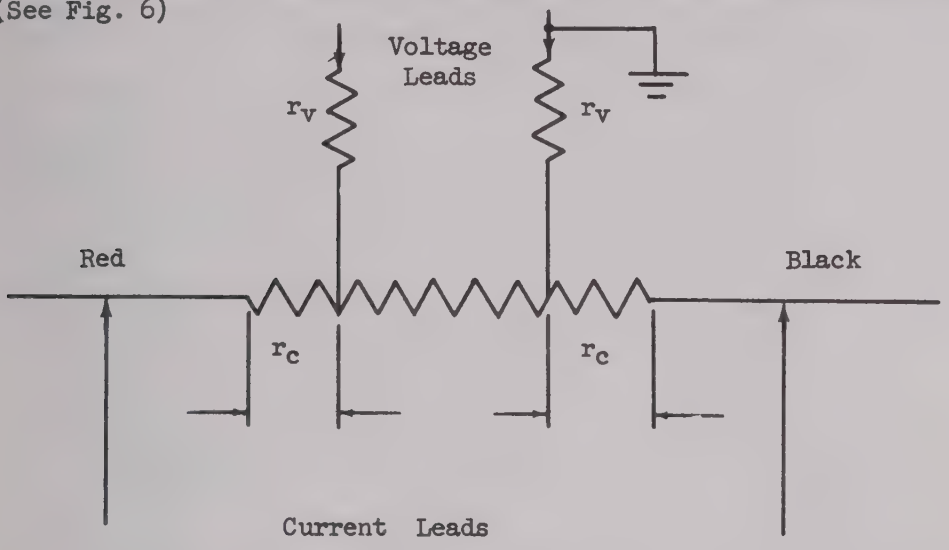


FIGURE 6. Series Resistance Measurements

TABLE 3

The tabulated values will give no more than 1% error in measurement:

| Range | Total resistance in current leads $2r_c$ | Total resistance in voltage leads $2r_v$ |
|---|---|---|
| Milliohm range settings | 1000x full scale range setting | 1 ohm |
| Ohm range settings | 33x full scale range setting | 10K ohms |

2-19. PREPARATION FOR RACK MOUNTING. (See Figure 7.)

1. The Model 503 is shipped for bench use with four feet and a tilt-bail. The Model 4000 Rack Mounting Kit converts the instrument to rack mounting to the standard EIA (RETMA) 19-inch width.

| Item (See Figure 7.) | Description | Keithley Part No. | Quantity |
|---|---|---|---|
| 1 | Cover Assembly | 14623B | 1 |
| 2 | Cover Assembly, Bottom (Supplied with Model 503) | 14590B | 1 |
| 3 | Angle, Rack | 14624B | 2 |
| 4 | Screw, Phillips Head, 10-32 UNC-2x$\frac{1}{4}$ (Supplied with Model 503) | -- | 4 |
| 5 | Front Panel (Supplied with Model 503) | -- | 1 |

TABLE 4. Parts List for Model 4000 Rack Mounting Kit.

2. To convert the Model 503, remove the four Phillips head screws at the bottom of each side of the instrument case. Lift off the top cover assembly with the handles; save the four screws. To remove the feet and tilt bail from the bottom cover assembly, turn the two screws near the back. The two pawl-type fasteners will release the cover and allow it to drop off. Remove the feet and the tilt bail and replace the cover (2).

3. Attach the pair of rack angles (3) to the cabinet with the four Phillips head screws (4) previously removed. Insert the top cover assembly (1) in place and fasten to the chassis with the two pawl-type fasteners at the rear. Store the top cover with handles, feet and tilt-bail for future use.

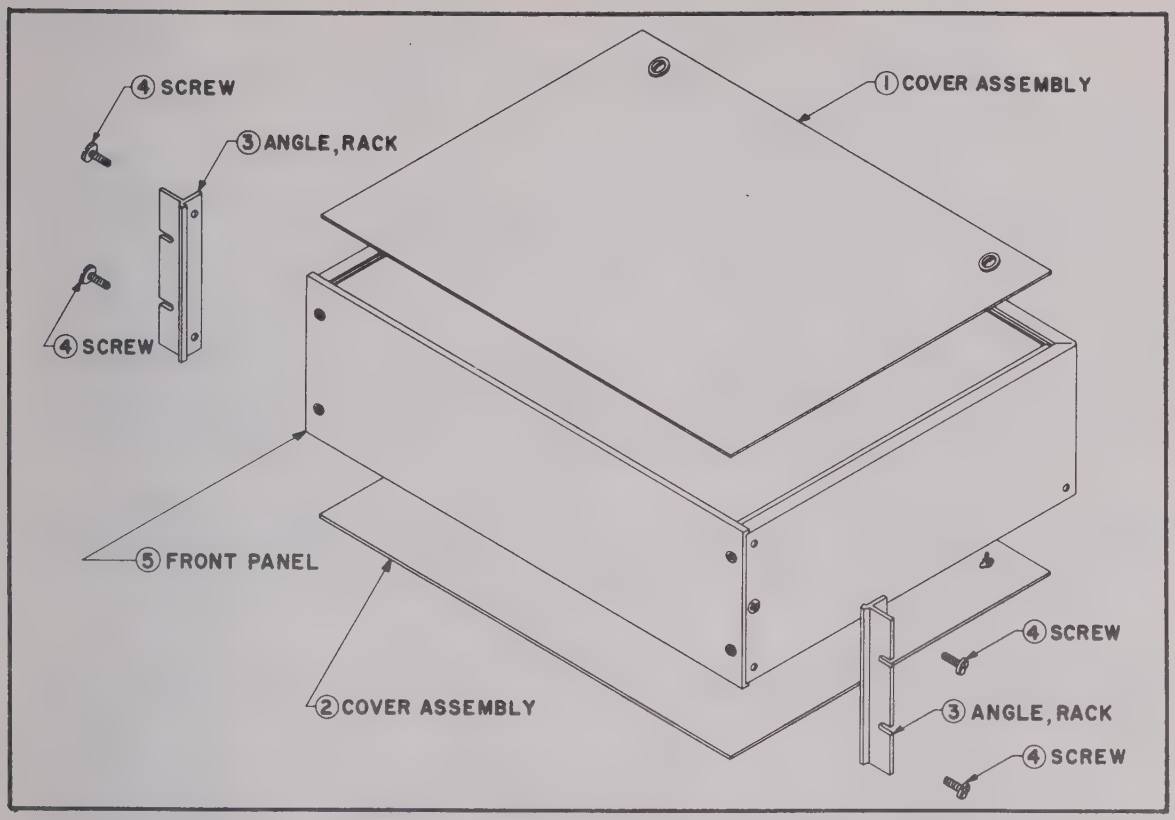


FIGURE 7. Exploded View for Rack Mounting.

# SECTION 3. CIRCUIT DESCRIPTION

The Model 503 circuit consists of four basic sections; a twelve volt super-regulated power supply, a transistor dc to ac inverter circuit, a four stage high gain vacuum tube amplifier and a silicon diode demodulator.

The twelve volt power supply operates from the line voltage and furnishes a very closely regulated 12 volts. This voltage is used to light the tube filaments and to operate the transistor converter. The converter operates at 40 cps. The output obtained from the converter transformer via various windings, operates the demodulator diodes, supplies the 40 cps test current and the B-plus supply for the ac amplifier via a rectifier-filter system.

The vacuum tube amplifier operates following an input transformer on the milliohm ranges and directly amplifies the signal on the ohm ranges. A high degree of gain stability is assured by a substantial feed-back factor and by the use of closely regulated plate and filament supplies.

The output of the amplifier is synchronously demodulated by a silicon diode bridge and the resulting dc signal operates the output circuit and the meter.

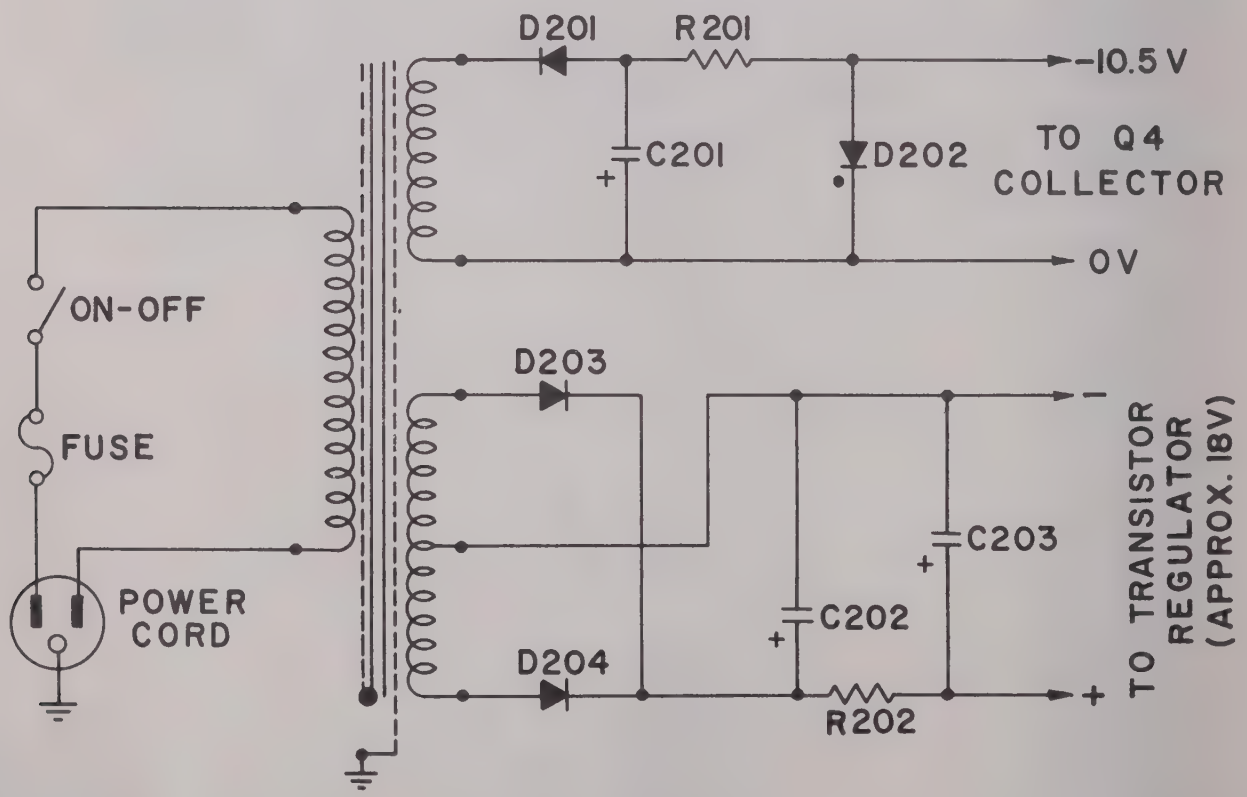


Figure 8. Power Supply Schematic Diagram

3-1. POWER SUPPLY: (Fig. 8) The power supply consists of three parts:

1. THE AC POWER TRANSFORMER AND FILTER-RECTIFIER CIRCUITRY: The power transformer, T-2, may be connected for either 117 or 234 volt operation as indicated in the schematic. The secondaries of the transformer supply 18 volts at 1 ampere and 117 volts at 5 ma. The output of the 18 volt winding is full-wave rectified by D203 and D204 and filtered by C202, C203 and R202. The dc voltage developed across C203 is approximately 20 volts. Neither terminal is grounded since the minus terminal of the regulator is grounded at the emitter terminal of Q1.

The output from the 117 v winding is half-wave rectified by D201 and filtered by C201. R201 is a dropping resistor for zener diode D202. This diode is connected between ground and the supply side of the load resistor for transistor Q4. The purpose of this connection will be discussed below.

2. THE SUPER-REGULATED 12 VOLT SUPPLY: (Fig. 9) The unregulated 20 volts dc obtained from rectifiers and the transformer is applied to a solid state regulator consisting of Q1 through Q6 and D202, D205, and D206. Q5 and Q6 form a differential amplifier which compares the voltage across the output of the regulator (C205 is across the output) via divider R210 and R209 to the voltage supplied by zener reference diode D205. If the voltages at the bases of Q5 and Q6 are not equal, the collector voltage of Q5 changes. This change is further amplified by Q4, Q3 and Q2. The signal is finally applied to the base of the series element in the regulator Q1. The signal is always of such magnitude and phase that output voltage is instantaneously brought back to 12 volts. RF-14 is a forward biased diode which sets the emitter voltage of Q4. The collector load resistor of Q4, R205, is returned to minus 10 volts supplied by zener, D202. This extra regulated voltage permits Q4

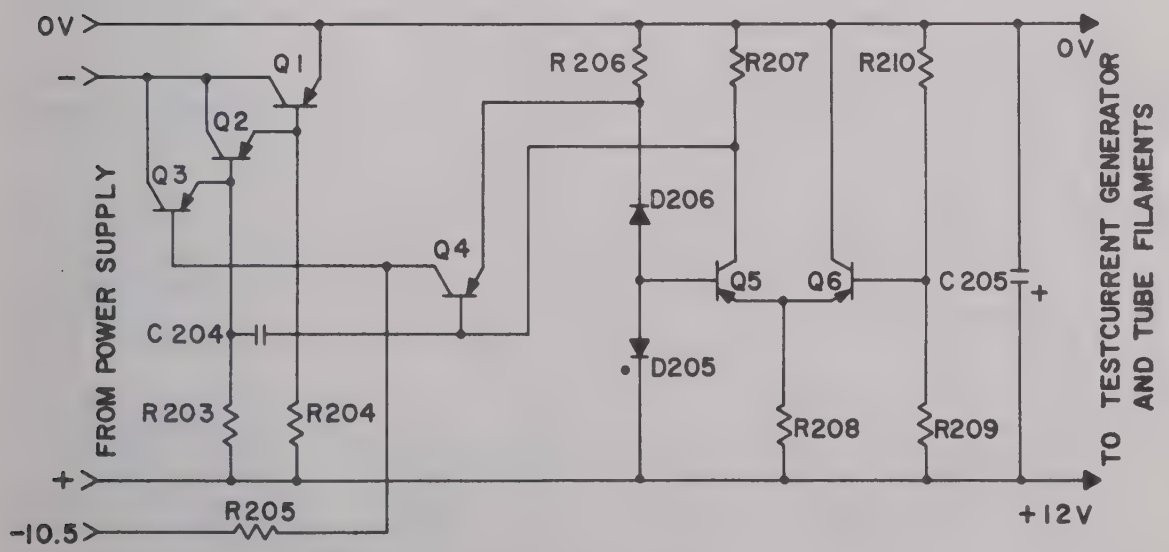


Figure 9. Super Regulated 12 Volt Supply Schematic Diagram

to operate at much higher gain than if the collector load were returned to the unregulated side of the supply and permits linear operation of Q4 with widely varying input voltages. This connection makes an important contribution to the performance of the power supply. Q3 and Q2 are cascaded emitter followers whose function is to increase the current gain of the series transistor, Q1. R203 and R204 are added to the circuit to provide stability at high temperatures since they make available a back-bias current equal to the leakage current of the series transistors at a temperature of approximately 80°C. C204 prevents high frequency oscillation of the power supply. The twelve volts at the output of the regulator powers the filaments of V1 and V2 and the pilot lamp DS-1.

3. 40 CPS TRANSISTOR STATIC INVERTER CIRCUIT: (Fig. 10) A portion of the regulated 12 volt power is also used as the supply for a dc converter consisting of the following parts: Transformer T3, transistors Q7 and Q8, diodes D207 and D208, capacitors C206 and C207, and resistors R211, R212 and R213. The operation is as follows: Transistors Q7 and Q8 are connected across the 12 volt supply through their emitters and the center-tap of the 12 volt winding of T3. The bases receive positive feed-back from another winding on T3. The phasing is such that one transistor is driven hard on while the other is cut off. This cycle lasts until the core of T3 reaches saturation. At this point the transformer can no longer keep the on transistor fully conducting and its collector current decreases. This causes the polarity of the feed-back winding to change and the transistor which was cut off now conducts and the conducting transistor is cut off. The frequency of oscillation is controlled by the transformer constants. In this case the frequency was picked to be 40 cps. The ten volts rms secondary winding is used to provide the test signal and provides a 20 volt peak-to-peak square-wave which is used with series resistors R128 through R139 to provide the proper test current for each range. Diodes D101 and D102 limit the output voltage when the current leads are open circuited.

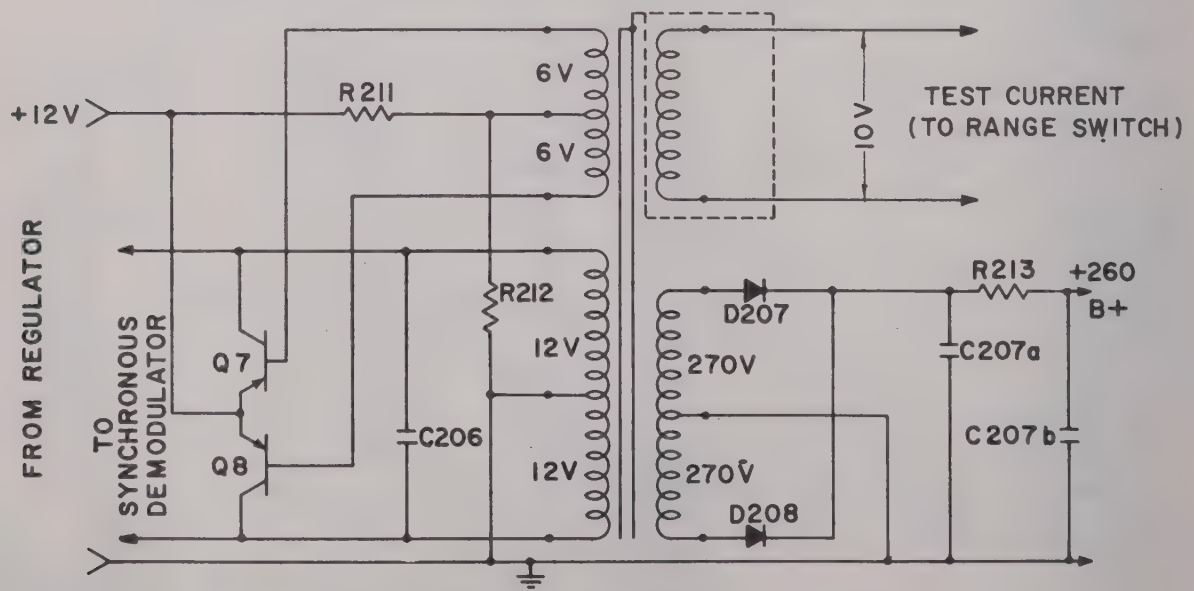


Figure 10. Test Current Generator Schematic Diagram

The 270 volt winding provides a B+ of 260 volts for the vacuum tube amplifier. The signal is rectified by D207 and D208 and filtered by C207 a and b and R213.

Since the stability of the converter circuit depends only on the stability of the twelve volt power supply, very close regulation is obtained for all potentials used in the circuit. Consequently line voltage variations from 100 to 130 volts have no effect on the instrument.

3-2. TEST CURRENT GENERATOR: (Fig. 10) As mentioned above, the test current is derived from the 10 volt winding of T-3. Since Q7 and Q8 bottom on each half cycle, the amplitude stability of the signal depends only on the 12 volt supply, and is therefore as stable as the well-regulated 12 volt supply. The circuit is not particularly critical as to frequency or wave-form. However, a nearly perfect square-wave is generated and the frequency is stable to better than a few percent.

The current signal is varied to provide the change in range except between 300 milliohms and 1 ohm where the input transformer is removed from the circuit. The variation is accomplished by switching resistors R128 through R139 with each current range. R140 through R142 are used in conjunction with R128 to keep a constant load on the current source winding to insure a high order of accuracy. Diodes D101 and D102 limit the open-circuit voltage in the current leads to plus or minus 0.5 volts.

3-3. THE AC VACUUM-TUBE VOLTMETER: (Fig. 11) On the Milliohm Ranges the input signal passes through transformer T-1. This transformer has approximately a 70:1 step-up ratio and improves the impedance match between the voltage signal and the input grid by a factor of 5000:1. On the ohm ranges, where a larger signal is obtainable, the transformer is switched out so that its input impedance will not shunt the resistance being measured. Accordingly, on the Milliohm ranges, the input resistance is about 200 ohms. On the Ohms ranges, the input resistance is one megohm.

The input signal is fed into the input of the amplifier either through T1 or around it, depending on range, through S1, the OPERATE-ZERO switch. This switch is of the make-before-break variety to prevent switching transients. Following the switch is C102, the input blocking capacitor and R101, the input resistor of the feed-back network. R102 connects the feed-back signal to the input grid so that the input grid signal is the difference between the input signal and the feed-back signal or, as it is usually termed, the error signal. The error signal is amplified by a standard three stage ac amplifier consisting of V1 and V2a. V2b is an output cathode-follower which drives the feed-back loop, R118, R143, R114 and R115; and the meter and output circuits.

The gain of the amplifier is varied slightly to compensate for the absence or presence of the input transformer by shunting R114 and R145 across R143 in the Milliohm position. The MILLIOHM TRIM control is used to calibrate the milliohm ranges. The divided output of R118 and R143 through R145 is applied to R102 and returned to the input, completing the feed-back loop. A feed-back factor of 40 db assures high gain stability. The fact that all potentials used in the amplifier are closely regulated, also helps assure a high degree of gain stability and complete freedom from line bounce.

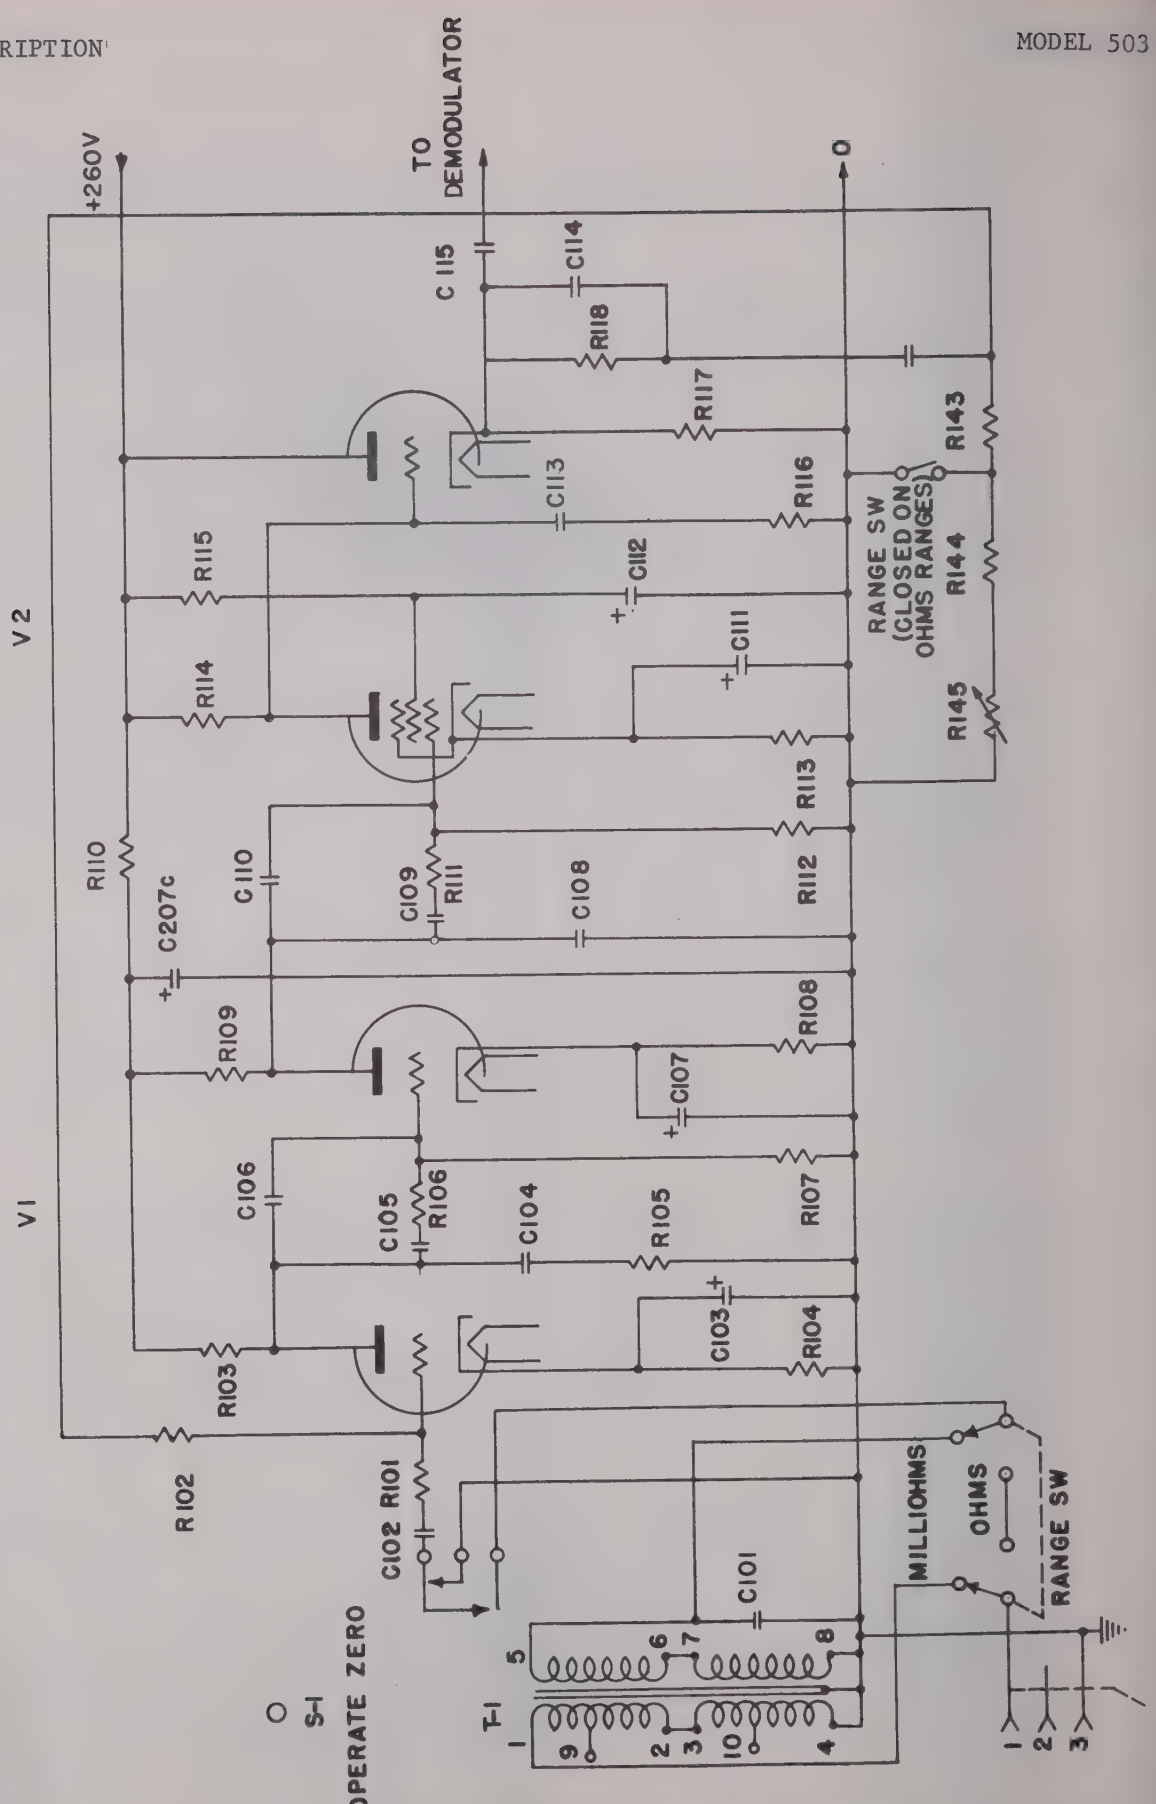


Figure 11. AC Amplifier Schematic Diagram

The amplifier is stabilized against low frequency oscillation by two sets phase-advance interstage couplings, C106, C105, R106 and R107 between the two halves of V1 and by C110, C109, R111 and R112 between V1b and V2a. Each network introduces an appropriate attenuation and phase lead to prevent oscillation and give adequate phase margin. C104, R105; C108; and C113 and R116; are individual high-frequency oscillation stoppers.

3-4. THE SYNCHRONOUS DEMODULATOR, METER AND OUTPUT: (Fig. 12) The output of V2b is coupled through C115 and R119 to a demodulator bridge circuit consisting of D103 through D106. The bridge is driven through R146 and R147 from the collectors of Q7 and Q8. Since the center tap of the collector winding is at ground, the drive signal is balanced to ground. When the junction of D103 and D105 is positive with respect to the junction of D104 and D106, the diodes are conducting and the junction between R119 and R120 is effectively grounded. When the polarity is reversed, the bridge is open circuited. Therefore, the signal is rectified in this manner. The output travels through R120, R121 and then is split. Part of the current drives the meter and the remainder the output. R121 is the calibration control. It is located on the front panel. On the CAL position of the range switch, R127 is switched in and this potentiometer is used to correct the meter reading if necessary. R125 allows calibration of the recorder terminal.

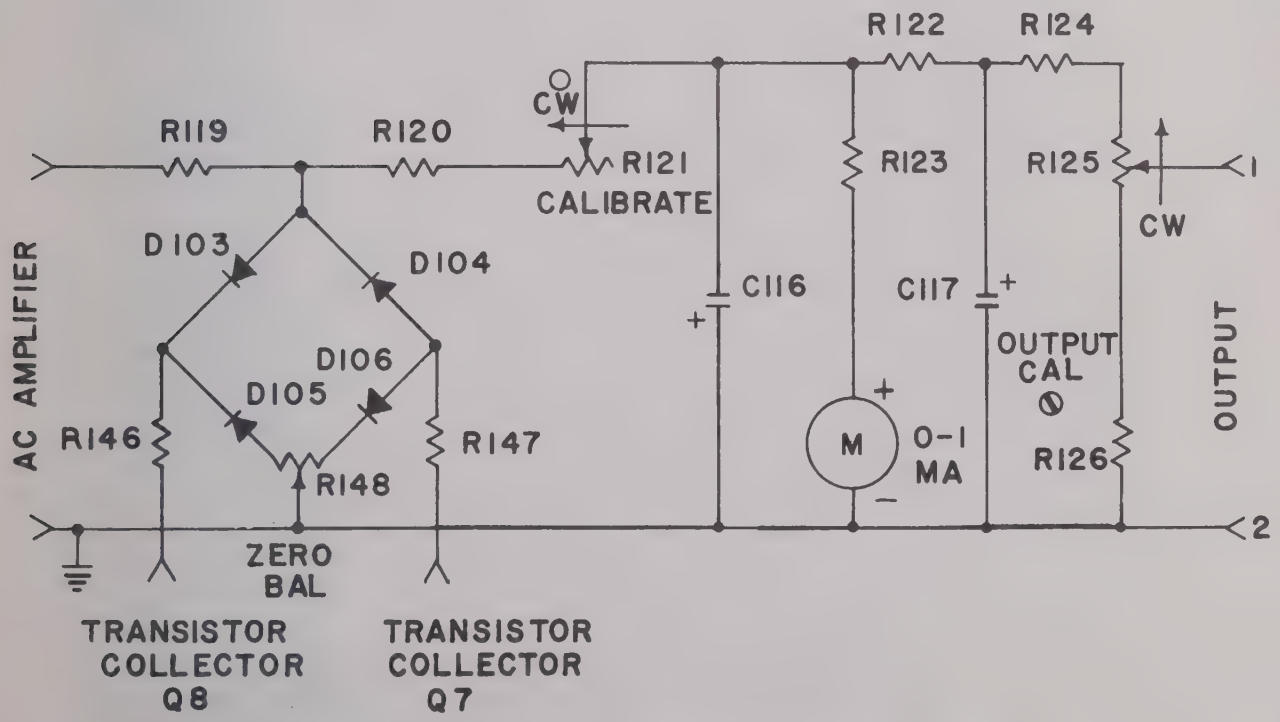


Figure 12. Synchronous Demodulator Meter - Output

# SECTION 4. SERVICING

The Model 503 should not require periodic maintenance. Occasional verification of the calibration (either section 2-14 or 4-2) and the dc balance (zero balance) should reveal any need for adjustment. If difficulty is encountered, read completely the following material:

## 4-1. Trouble Shooting Guide

Servicing is quite straight forward as the 503 employs only two vacuum tubes and eight transistors, all of which are conservatively operated within their ratings. No matched or critically selected components are used.

The usual caution should be observed when soldering to the printed circuit board as excessive heat will damage the board.

In servicing, bear in mind all operating voltages are obtained from the 12 volt transistor regulator, either directly or through the transistor inverter.

Reference should be made to Circuit Schematic DR 146280 for voltage values and other circuit parameters.

In case of complete failure to operate, the fuse, line cord and power source should all be checked. If these are all found satisfactory, use the following detailed service procedure to isolate the trouble:

1. POWER SUPPLY:

   a. THE AC POWER TRANSFORMER AND FILTER RECTIFIER CIRCUITRY (Figure 8): Set the RANGE SWITCH to the 3 milliohm position with ZERO OPERATE switch in ZERO position. Remove transistor Q-1 from the circuit and measure the voltage across C203. (See schematic notes for recommended type VTVM). If approximately 25 volts dc is indicated, this portion of the circuit is in proper working order. Note that neither terminal of C203 is grounded.

      Measure voltage across D202, which should be between -9 to -12 volts with respect to ground. If not, check diodes D201 and D202.

   b. THE SUPER REGULATED 12 VOLT SUPPLY (See Figure 9): Replace transistor Q-1 in the circuit. Determine that the regulated 12 volts across C205 does not vary more than 5 mv with line voltages from 105 volts to 125 volts. Use a variable autotransformer to supply the line voltage. (General Radio Variac).

      If no voltage is present or the 12 volts are not regulated, check components in this portion of the circuit.

2. 40 CPS TRANSISTOR INVERTER (Figure 10): With the range switch set at 3 milliohms, connect the current test leads to an oscilloscope. Observe a 40 cps square wave with a peak to peak amplitude of about 20 volts. If this is present, measure +260 volts dc across C207b. If no square wave is observed, or the B+ is absent, check the components in this portion of the circuit.

NOTE: FOR SECTIONS 3 AND 4 THE RANGE SWITCH SHOULD BE IN CAL POSITION WITH THE ZERO-OPERATE SWITCH IN THE OPERATE POSITION.

3. THE AC VACUUM TUBE VOLTMETER. (Figure 11): Be sure both vacuum tube filaments are heated and the pilot lamp is lit. Since the pilot lamp is in parallel with the filament of V1 and the combination is in series with the filament of V2 across the 12 volt regulator, some service information is provided by its brilliance. If it lights normally, it may be assumed the supply is working properly. If it is brighter than normal, V1 is probably burned out. If the lamp is not lit, either V2 is burned out, or the pilot itself is open. The instrument will operate without the pilot lamp, but since the life of V1 will be reduced, it should be replaced.

If it is determined the tubes are operating properly, proceed as follows: Measure at the junction of C102 and R101 a 4 millivolt peak to peak square wave. This indicates the test current is properly reaching the amplifier through the range switch. Should there be no signal, or one of improper magnitude, inspect the range switch for faulty operation or component failure.

Next, check the voltage between pin 8 of V2 and ground. This should be a square wave voltage of about 10 volts peak to peak. A distortion in/or absence of this signal indicates a faulty AC amplifier.

4. SYNCHRONOUS DEMODULATOR - METER OUTPUT (Figure 12): Connect an oscilloscope to the junction of R-119 and R-120 and compare this wave form with Figure 13.

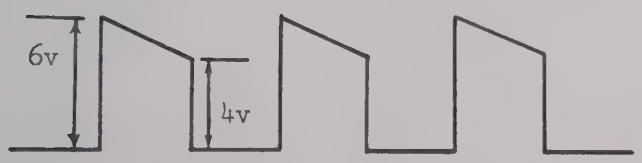


Figure 13

A distortion or absence of this wave form is an indication of a faulty demodulator.

4-3. CALIBRATION: The procedure of Section 2-14. calibrates the 503 on the 1000 range. Other ranges should be within specification once this range is properly calibrated. If the user wishes to further verify the CALIBRATION, or to calibrate for a given range or point, the following procedures are recommended:

1. OHM RANGES: A standard resistor of at least 0.05% accuracy is recommended. The standard should be selected to 3/4 of full scale of range in question, or to the value of the measurement to be made. The slotted control on the front panel will adjust the meter needle for proper deflection.

2. MILLIOHM RANGES: To calibrate the milliohm ranges, an appropriate low value standard resistor is required. Leeds & Northrup Type 4221-B, 100 milliohms; Type 4222-B - 10 milliohms: and Type 4223-B, 1 milliohm are all suitable. Using one of these resistors or their equivalent, adjust the "MILLIOHM CAL" (Figure 14) for the proper meter reading.

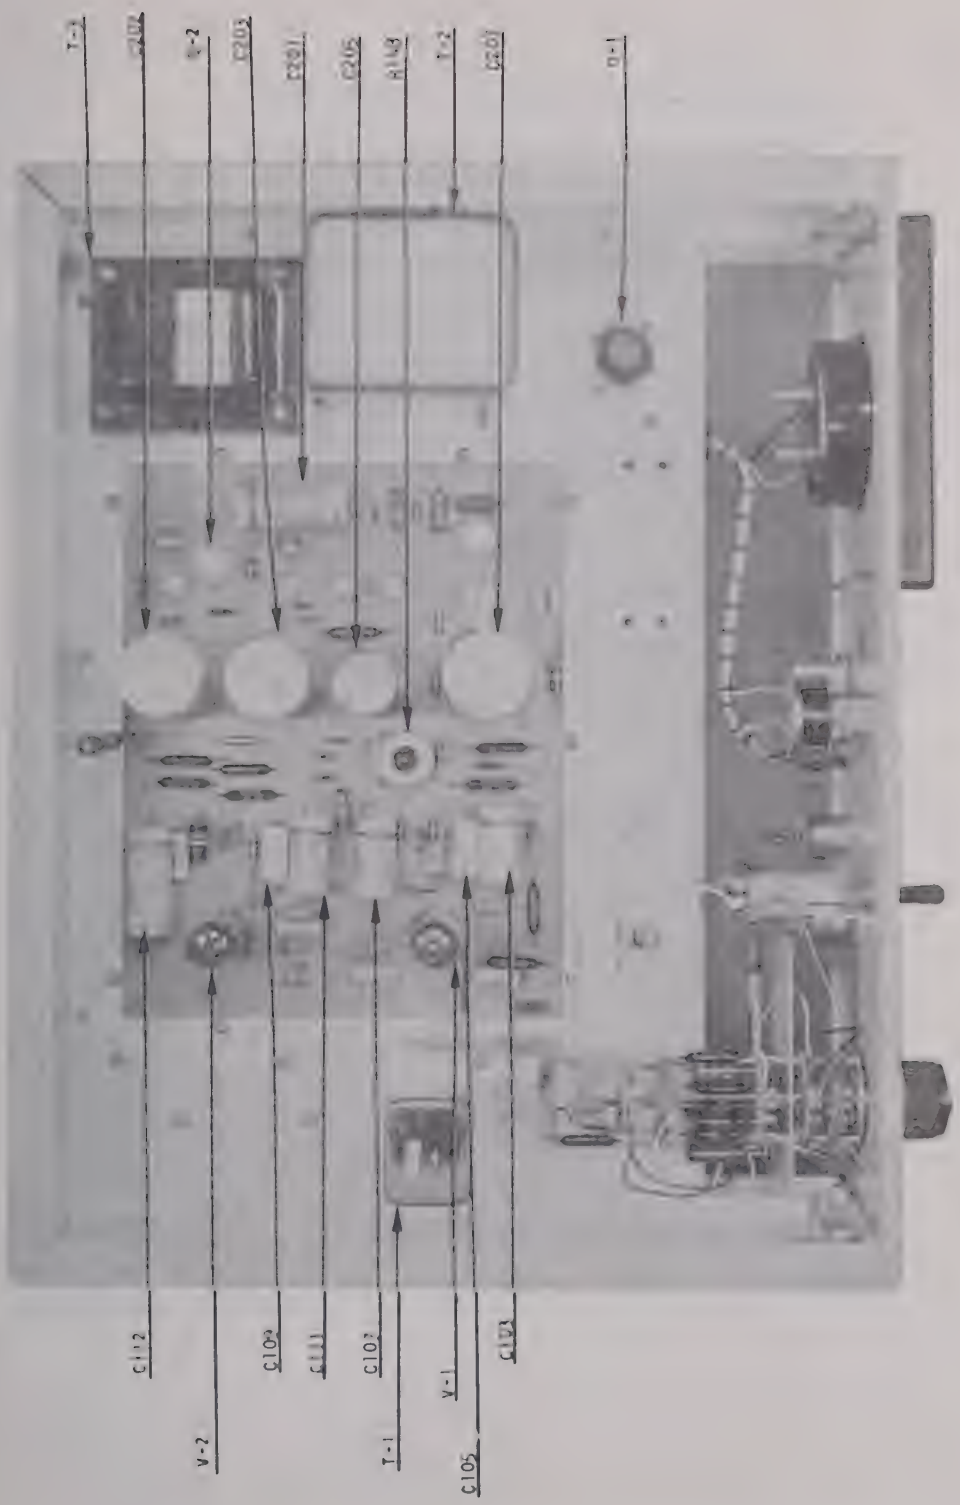


FIGURE 14. Model 503 Internal Components Locations (Top Removed).

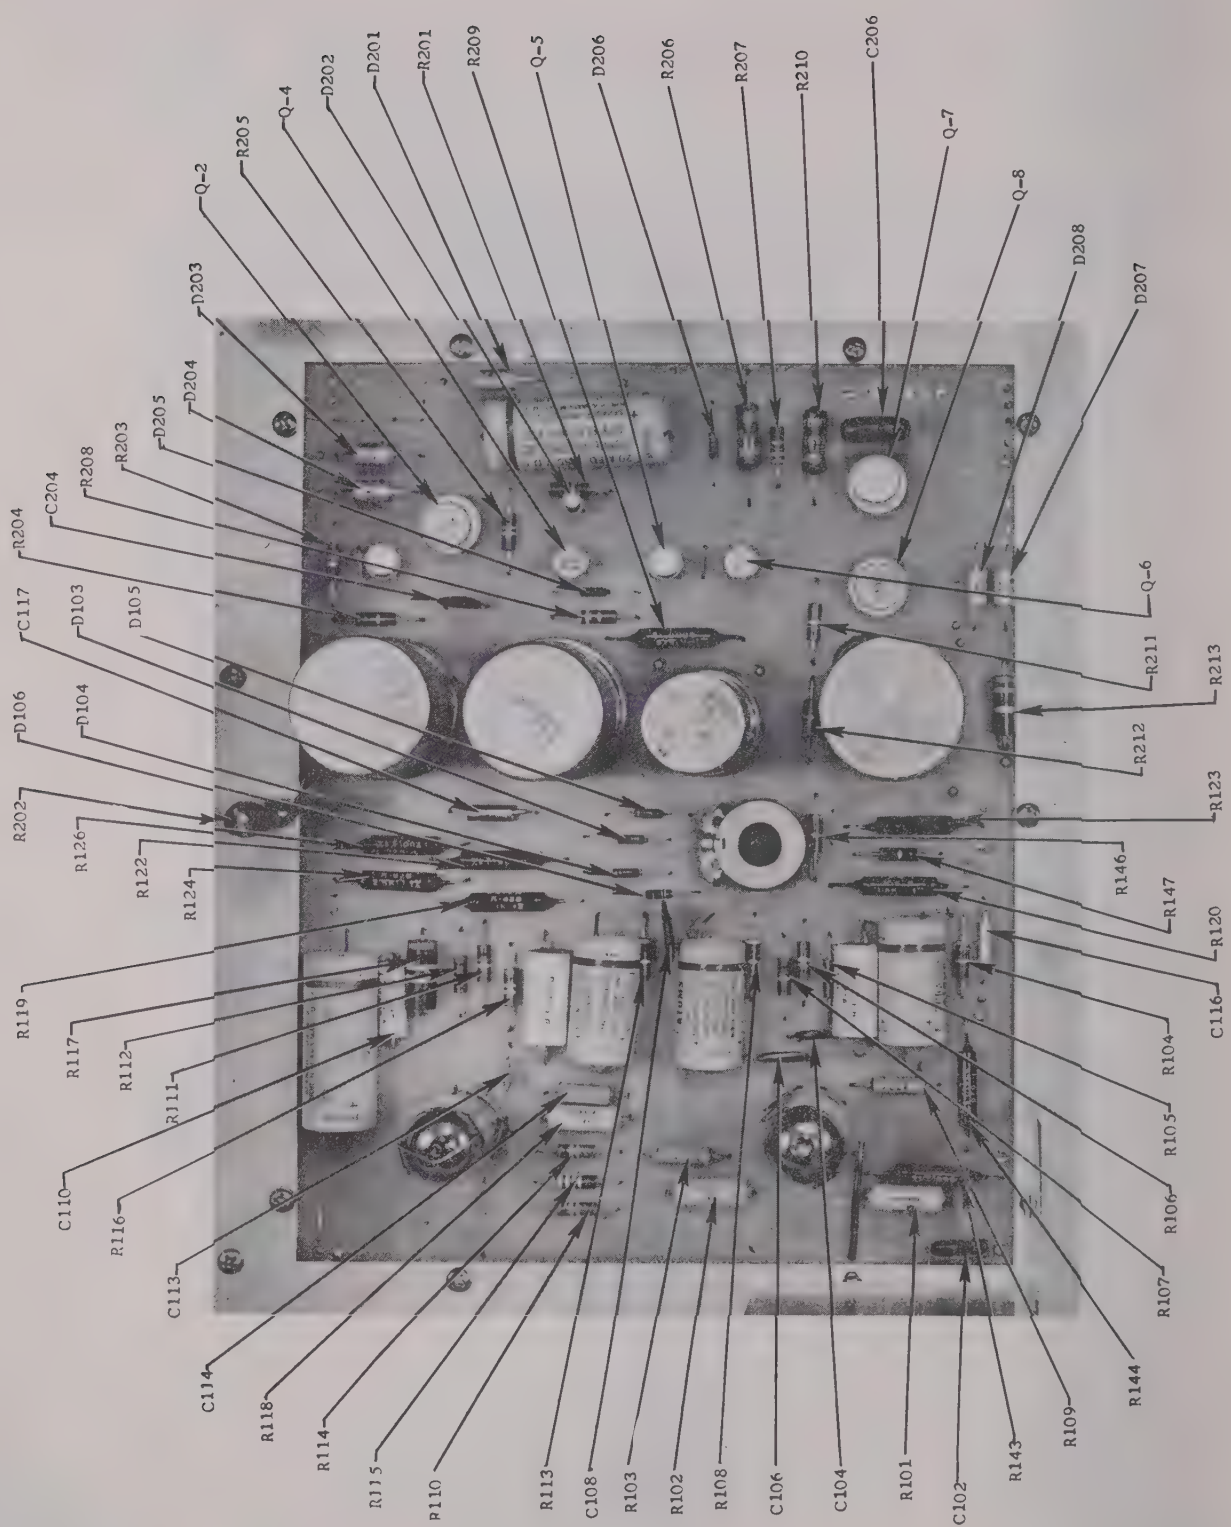


FIGURE 15. Location of Printed Circuit Board Components

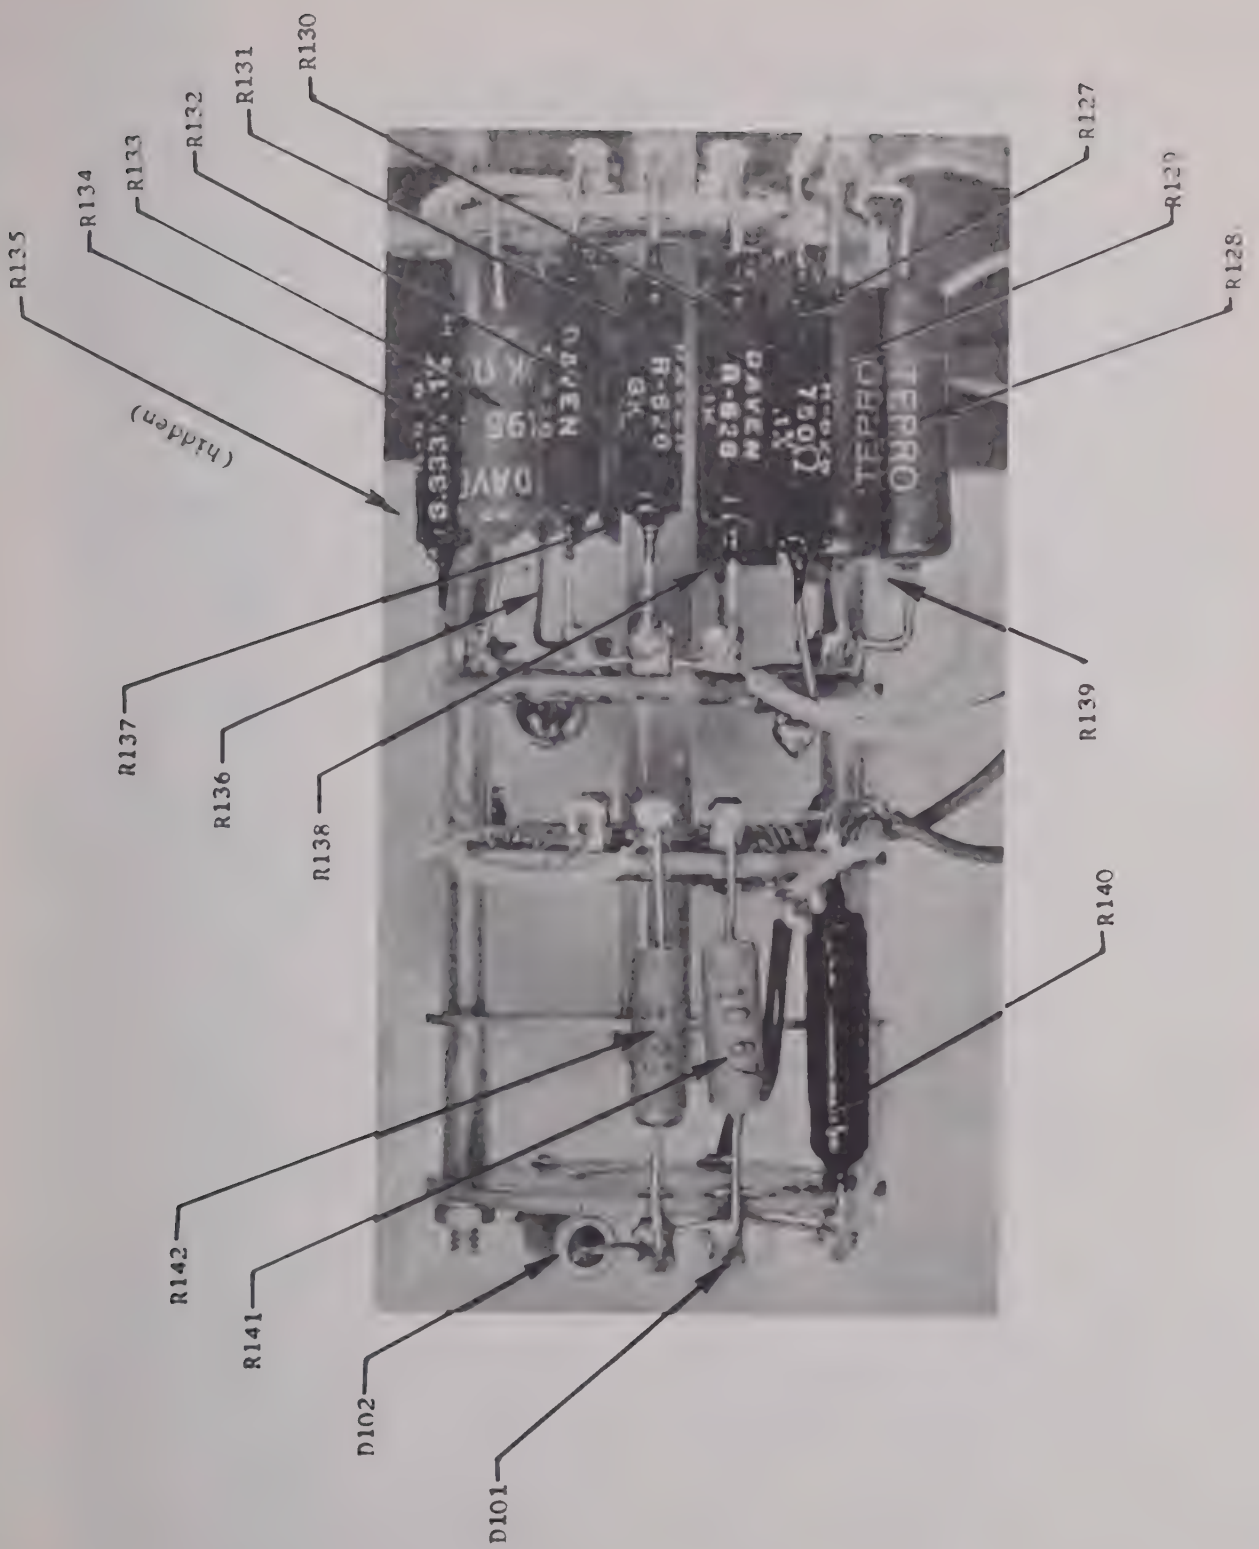


FIGURE 16. Location of Range Switch Components

# SECTION 5. REPLACEABLE PARTS

5-1. REPLACEABLE PARTS LIST. The Replaceable Parts List describes the components of the Models 503 and 503C Milliohmmeters and 5031 Current and Voltage Leads. The List gives the circuit designation, the part description, a suggested manufacturer, the manufacturer's part number and the Keithley Part Number. The name and address of the manufacturers listed in the "Mfg. Code" column are contained in Table 6.

5-2. HOW TO ORDER PARTS.

a. For parts orders, include the instrument's model and serial number, the Keithley Part Number, the circuit designation and a description of the part. All structural parts and those parts coded for Keithley manufacture (80164) must be ordered from Keithley Instruments, Inc. In ordering a part not listed in the Replaceable Parts List, completely describe the part, its function and its location.

b. Order parts through your nearest Keithley distributor or the Sales Service Department, Keithley Instruments, Inc.

| | | | |
|---|---|---|---|
| amp | ampere | Mfg. | Manufacturer |
| | | MtF | Metal Film |
| CbVar | Carbon Variable | Mil. No. | Military Type Number |
| CerD | Ceramic, Disc | My | Mylar |
| Comp | Composition | | |
| CompV | Composition Variable | Ω | ohm |
| DCb | Deposited Carbon | | |
| | | p | pico ($10^{-12}$) |
| EMC | Electrolytic, metal cased | | |
| ETB | Electrolytic, tubular | μ | micro ($10^{-6}$) |
| ETT | Electrolytic, tantalum | | |
| | | v | volt |
| f | farad | Var | Variable |
| k | kilo ($10^{3}$) | w | watt |
| | | WW | Wirewound |
| M or meg | mega ($10^{6}$) or megohms | WWVar | Wirewound Variable |
| m | milli ($10^{-3}$) | | |

TABLE 5. Abbreviations and Symbols.

## MODELS 503, 503C REPLACEABLE PARTS LIST

(Refer to Schematic Diagram 14628D for circuit designations.)

### CAPACITORS

| Circuit Desig. | Value | Rating | Type | Mfg. Code | Mfg. Part No. | Keithley Part No. |
|---|---|---|---|---|---|---|
| C101 | .01 μf | 50 v | My | 84411 | 601PE | C41-.01M |
| C102 | 0.1 μf | 50 v | My | 84411 | 601PE | C41-0.1M |
| C103 | 100 μf | 15 v | ETB | 72699 | TD100-15 | C11-100M |
| C104 | 220 pf | 1000 v | CerD | 72982 | 831X5R221K | C22-220P |
| C105 | 1 μf | 200 v | My | 13050 | 107-21 | C66-1M |
| C106 | .005 μf | 1000 v | CerD | 72982 | 811Z5V502P | C22-.005M |
| C107 | 100 μf | 15 v | ETB | 72699 | TD100-15 | C11-100M |
| C108 | .02 μf | 1000 v | CerD | 72982 | 841Z5V203P | C22-.02M |
| C109 | 1 μf | 200 v | My | 13050 | 107-21 | C66-1M |
| C110 | .047 μf | 200 v | My | 14655 | WMF2S47 | C66-.047M |
| C111 | 100 μf | 15 v | ETB | 72699 | TD100-15 | C11-100M |
| C112 | 20 μf | 250 v | ETB | 56289 | TVA1508 | C27-20M |
| C113 | .002 μf | 1000 v | CerD | 72982 | 801Z5V202P | C22-.002M |
| C114 | 270 pf | 500 v | Mica | 84171 | DM15-271J | C21-270P |
| C115 | 10 μf | 200 v | PMC | 72354 | X10316 | C69-10M |
| C116 | 56 μf | 6 v | ETT | 05397 | K56-J6KS | C70-56M |
| C117 | 56 μf | 6 v | ETT | 05397 | K56-J6KS | C70-56M |
| C201 | 20 μf | 250 v | ETB | 56289 | TVA1508 | C27-20M |
| C202 | 500 μf | 50 v | EMC | 14655 | AA0160 | C57-500M |
| C203 | 500 μf | 50 v | EMC | 14655 | AA0160 | C57-500M |
| C204 | .01 μf | 1000 v | CerD | 72982 | 811Z5V103P | C22-.01M |
| C205 | 500 μf | 25 v | EMC | 14655 | AA0120 | C58-500M |
| C206 | 0.22 μf | 50 v | My | 84411 | 601PE | C41-0.22M |
| C207 | 40-40-20μf | 450 v | EMC | 56289 | TVL3786 | C33-40/40/20M |

### DIODES

| Circuit Desig. | Type | Number | Mfg. Code | Keithley Part No. |
|---|---|---|---|---|
| D101 | Rectifier, 1A, 800V | 1N4006 | MOT | RF-38 |
| D102 | Rectifier, 1A, 800V | 1N4006 | MOT | RF-38 |
| D103 | Silicon | 1N645 | 01295 | RF-14 |
| D104 | Silicon | 1N645 | 01295 | RF-14 |
| D105 | Silicon | 1N645 | 01295 | RF-14 |
| D106 | Silicon | 1N645 | 01295 | RF-14 |
| D107 | Silicon | 1N645 | 01295 | RF-14 |
| D201 | Rectifier, 1A, 800V | 1N4006 | MOT | RF-38 |
| D202 | Zener | 1N715 | 12954 | DZ-22 |

DIODES (Cont'd)

| Circuit Desig. | Type | Number | Mfg. Code | Keithley Part No. |
|---|---|---|---|---|
| D203 | Silicon | 1N1563A | 04713 | RF-19 |
| D204 | Silicon | 1N1563A | 04713 | RF-19 |
| D205 | Zener | 1N936 | 04713 | DZ-5 |
| D206 | Silicon | 1N645 | 01295 | RF-14 |
| D207 | Rectifier, 1A, 800V | 1N4006 | MOT | RF-38 |
| D208 | Rectifier, 1A, 800V | 1N4006 | MOT | RF-38 |
| D209 | Silicon | 1N645 | 01295 | RF-14 |

MISCELLANEOUS PARTS

| Circuit Desig. | Description | Mfg. Code | Keithley Part No. |
|---|---|---|---|
| DS-1 | Pilot Light Assembly, Red lens (Mfg. No. 5100) | 72765 | PL-5R |
| --- | Bulb, Miniature bayonet base (Mfg. No. 47) | 08804 | PL-4 |
| F1 (117 v) | Fuse, 0.5 amp, (Mfg. No. 312.500) | 75915 | FU-6 |
| F1 (234 v) | Fuse, 0.25 amp, (Mfg. No. 3120.25) | 75915 | FU-9 |
| --- | Fuse Holder (Mfg. No. 342012) | 75915 | FH-3 |
| J1 | Receptacle, VOLTAGE (Mfg. No. XLR-3-32) | 71468 | CS-71 |
| J2 | Receptacle, CURRENT (Mfg. No. XLR-3-32) | 71468 | CS-71 |
| --- | Jack, Mate of J1 and J2 (Mfg. No. XLR-3-11C) | 71468 | CS-72 |
| J3 | Receptacle, Microphone, OUTPUT (Mfg. No. 80PC2F) | 02660 | CS-32 |
| --- | Plug, Microphone, Mate of J3 (Mfg. No. 80MC2M) | 02660 | CS-33 |
| J4 (c) | Receptacle, Output (Mfg. No. 126-221) | 02660 | CS-81 |
| J5 (c) | Same as J4, but does not have jumper | | |
| --- | Plug, Mate of J4 and J5 (Mfg. No. 126-220) | 02660 | CS-82 |
| K1 (c) | Relay, SPDT | 80164 | RL-3 |
| M1 (a) | Meter | 80164 | ME-39 |
| M1 (c) | Contact Meter | 80164 | ME-42 |
| P1 | Power Cord Set, 6 feet (Mfg. No. 4638-13) | 93656 | CO-5 |
| --- | Cable Clamp (Mfg. No. SR-6P-1) | 28520 | CC-4 |

(a) Used only on Model 503.
(c) Used only on Model 503C.

MISCELLANEOUS PARTS (Cont'd)

| Circuit Desig. | Description | Mfg. Code | Keithley Part No. |
|---|---|---|---|
| S1 | Switch, SPDT, OPERATE - ZERO (Mfg. No. 3003DL) | 82389 | SW-59 |
| S2 | Rotary Switch less components, Range | 80164 | SW-114 |
| --- | Switch Assembly with components, Range | 80164 | 14722B |
| --- | Knob Assembly, Range Switch | 80164 | 15363A |
| S3 | Toggle Switch, DPDT, ON (Mfg. No. 20905-FR) | 04009 | SW-14 |
| S4 (c) | Pushbutton Switch (Mfg. No. 202) | 82389 | SW-35 |
| S5 | Slide Switch | 80164 | SW-151 |
| T1 | Transformer, Input | 80164 | TR-53 |
| T2 | Transformer, Power | 80164 | TR-59 |
| T3 | Transformer, Inverter | 80164 | TR-55 |

RESISTORS

| Circuit Desig. | Value | Rating | Type | Mfg. Code | Mfg. Part No. | Keithley Part No. |
|---|---|---|---|---|---|---|
| R101 | 1 MΩ | 1%, 1/2 w | MtF | 07716 | CEC | R113-1M |
| R102 | 1 MΩ | 1%, 1/2 w | MtF | 07716 | CEC | R113-1M |
| R103 | 470 kΩ | 1%, 1/2 w | DCb | 79727 | CFE-15 | R12-470K |
| R104 | 4.7 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-4.7K |
| R105 | 12 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-12K |
| R106 | 10 MΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-10M |
| R107 | 1 MΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-1M |
| R108 | 4.7 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-4.7K |
| R109 | 470 kΩ | 1%, 1/2 w | DCb | 79727 | CFE-15 | R12-470K |
| R110 | 15 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-15K |
| R111 | 10 MΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-10M |
| R112 | 1 MΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-1M |
| R113 | 470 Ω | 10%, 1/2 w | Comp | 01121 | EB | R1-470 |
| R114 | 100 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-100K |
| R115 | 390 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-390K |
| R116 | 10 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-10K |
| R117 | 10 kΩ | 10%, 2 w | Comp | 01121 | HB | R3-10K |
| R118 | 1 MΩ | 1%, 1/2 w | MtF | 07716 | CEC | R113-1M |
| R119 | 1 kΩ | 1%, 1/2 w | WW | 01686 | E-30 | R58-1K |
| R120 | 1.8 kΩ | 1%, 1/2 w | WW | 01686 | E-30 | R58-1.8K |

(c) Used only on Model 503C.

RESISTORS (Cont'd)

| Circuit Desig. | Value | Rating | Type | Mfg. Code | Mfg. Part No. | Keithley Part No. |
|---|---|---|---|---|---|---|
| R121 | 1 kΩ | 10%, 3 w | WWVar | 37942 | R1000L | RP3A-1K |
| R122 | 2.5 kΩ | 1%, 1/2 w | WW | 01686 | E-30 | R58-2.5K |
| R123 | 500 Ω | 1%, 1/2 w | WW | 01686 | E-30 | R58-500 |
| R124 | 2.5 kΩ | 1%, 1/2 w | WW | 01686 | E-30 | R58-2.5K |
| R125 | 200 Ω | 10%, 5 w | WWVar | 71450 | AW | RP3A-200 |
| R126 | 700 Ω | 1%, 1/2 w | WW | 01686 | E-30 | R58-700 |
| R127 | 750 Ω | 0.1%, 1/2 w | WW | 15909 | 1252 | R70-750 |
| R128 | 100.5 Ω | 10%, 1/2 w | WW | 01686 | | R72-100.5 |
| R129 | 301.5 Ω | 10%, 1/2 w | WW | 01686 | | R72-301.5 |
| R130 | 1 kΩ | 0.1%, 1/2 w | WW | 15909 | 1252 | R70-1K |
| R131 | 3 kΩ | 0.1%, 1/2 w | WW | 15909 | 1252 | R70-3K |
| R132 | 10 kΩ | 0.1%, 1/2 w | WW | DALE | MFF-10K | R-169-10K |
| R133 | 30 kΩ | 0.1%, 1/4 w | WW | 15909 | 1195 | R56-30K |
| R134 | 3.33 kΩ | 0.1%, 1/2 w | WW | 15909 | 1252 | R70-3.33K |
| R135 | 33.3 kΩ | 0.1%, 1/4 w | WW | 15909 | 1195 | R56-33.3K |
| R136 | 100 kΩ | 0.1%, 1/4 w | WW | DALE | MFF-100K | R-169-100K |
| R137 | 333.3 kΩ | 0.1%, 1/4 w | WW | DALE | MFF-333.3 | R-169-333.3K |
| R138 | 1 MΩ | 0.1%, 1 w | WW | DALE | MFF-1M | R-169-1M |
| R139 | 3.33 MΩ | 0.1%, 1 w | MtF | 07716 | MEFT-8 | R59-3.33M |
| R140 | 50 Ω | 1%, 1/2 w | WW | 01686 | E-30 | R58-50 |
| R141 | 11.1 Ω | 1%, 1/2 w | DCb | 79727 | CFE-15 | R12-11.1 |
| R142 | 3.33 Ω | 1%, 1/2 w | DCb | 79727 | CFE-15 | R12-3.33 |
| R143 | 500 Ω | 1%, 1/2 w | WW | 01686 | E-30 | R58-500 |
| R144 | 235 Ω | 1%, 1/2 w | WW | 01686 | E-30 | R58-235 |
| R145 | 100 Ω | 10%, 5 w | WWVar | 71450 | AW | RP3A-100 |
| R146 | 1 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-1K |
| R147 | 1 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-1K |
| R148 | 100 Ω | 30%, 1/2 w | CompV | 71450 | 45 | RP12-100 |
| R201 | 27 kΩ | 10%, 1 w | Comp | 01121 | GB | R2-27K |
| R202 | 1.5 Ω | 5%, 10 w | WW | 94310 | FR-10 | R5-1.5 |
| R203 | 10 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-10K |
| R204 | 680 Ω | 10%, 1/2 w | Comp | 01121 | EB | R1-680 |
| R205 | 10 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-10K |
| R206 | 300 Ω | 1%, 1/2 w | WW | 01686 | E-30 | R58-300 |
| R207 | 3.9 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-3.9K |
| R208 | 3.9 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-3.9K |
| R209 | 900 Ω | 1%, 1/2 w | WW | 01686 | E-30 | R58-900 |
| R210 | *300 Ω | 1%, 1/2 w | WW | 01686 | E-30 | R58-300 |
| R211 | 100 Ω | 10%, 1/2 w | Comp | 01121 | EB | R1-100 |
| R212 | 1.5 kΩ | 10%, 1/2 w | Comp | 01121 | EB | R1-1.5K |

* Nominal value, factory set.

RESISTORS (Cont'd)

| Circuit Desig. | Value | Rating | Type | Mfr. Code | Mfr. Desig. | Keithley Part No. |
|---|---|---|---|---|---|---|
| R213 | 3.3 kΩ | 10%, 1 w | Comp | 01121 | GB-332-10% | R2-3.3K |
| R214 | 1 Ω | 1%, 1/2 w | DCb | 79727 | CFE-15-1Ω | R12-1 |
| R215 | 2.2 kΩ | 10%, 1/2 w | Comp | 01121 | EB-222-10% | R1-2.2K |
| R216 | 1 Ω | 1%, 1/2 w | DCb | 79727 | CFE-15-1Ω | R12-1 |

TRANSISTORS

| Circuit Desig. | Mfr. Desig. | Mfr. Code | Keithley Part No. |
|---|---|---|---|
| Q1 | 2N1535 | 04713 | TG-7 |
| Q2 | 40319 | 02735 | TG-50 |
| Q3 | 2N1381 | 01295 | TG-8 |
| Q4 | 2N1381 | 01295 | TG-8 |
| Q5 | 2N1381 | 01295 | TG-8 |
| Q6 | 2N1381 | 01295 | TG-8 |
| Q7 | 2N5193 | 04713 | TG-107 |
| Q8 | 2N5193 | 04713 | TG-107 |

VACUUM TUBES

| Circuit Desig. | Mfr. Desig. | Mfr. Code | Keithley Part No. |
|---|---|---|---|
| V1 | 7025 | 73445 | EV-7025 |
| V2 | 6U8 | 81453 | EV-6U8A |

MODEL 5031 REPLACEABLE PARTS LIST

| Description | Mfr. Code | Keithley Part No. |
|---|---|---|
| Test lead, 48 inches | 80164 | 14731B |
| Two Alligator Clips (Mfg. Series 60) | 76545 | AC-1 |
| Jack (Mfg. No. XLR-3-11C) | 71468 | CS-72 |

01121 Allen-Bradley Corp.
Milwaukee, Wis.

01295 Texas Instruments, Inc.
Semi-Conductor-Components Division
Dallas, Texas

01686 RCL Electronics, Inc.
Riverside, N. J.

04713 Motorola, Inc.
Semiconductor Products Division
Phoenix, Arizona

05397 Kemet Co.
Cleveland, Ohio

07716 International Resistance Co.
Burlington, Iowa

08804 Lamp Metals and Components
Department G. E. Co.
Cleveland, Ohio

12954 Dixon Electronics Corp.
Scottsdale, Arizona

13050 Potter Co.
Wesson, Miss.

14655 Cornell-Dubilier Electric Corp.
Newark, N. J.

15909 Daven Co.
Livingston, N. J.

28520 Heyman Mfg. Co.
Kenilworth, N. J.

37942 Mallory, P. R., and Co., Inc.
Indianapolis, Ind.

56289 Sprague Electric Co.
North Adams, Mass.

71450 CTS Corp.
Elkhart, Ind.

71468 Cannon Electric Co.
Los Angeles, Calif.

72354 Fast John E. and Co.
Chicago, Ill.

72699 General Instrument Corp.
Newark, N. J.

72765 Drake Mfg. Co.
Chicago, Ill.

02660 Amphenol-Borg Electronics Corp.
Broadview Chicago, Illinois

02735 RCA Semiconductor and Materials
Division of Radio Corp. of America
Somerville, N. J.

04009 Arrow-Hart and Hegeman Electric Co.
Hartford, Conn.

72982 Erie Technological Products, Inc.
Erie, Pa.

73445 Amperex Electronic Co. Division of
North American Philips Co., Inc.
Hicksville, N. Y.

75042 International Resistance Co.
Philadelphia, Pa.

75915 Littelfuse, Inc.
Des Plaines, Ill.

76545 Mueller Electric Co.
Cleveland, Ohio

79727 Continental-Wirt Electronics Corp.
Philadelphia, Pa.

80164 Keithley Instruments, Inc.
Cleveland, Ohio

81453 Raytheon Co.
Industrial Components Div.
Industrial Tube Operation
Newton, Mass.

82389 Switchcraft, Inc.
Chicago, Ill.

82879 Royal Electric Corp.
Pawtucket, R. I.

84171 Arco Electronics, Inc.
Great Neck, N. Y.

84411 Good-All Electric Mfg. Co.
Ogallala, Nebr.

94310 Tru Ohm Products Div. of
Model Engineering and Mfg., Inc.
Chicago, Ill.

99942 Hoffman Electronics Corp.
Semiconductor Division
El Monte, Calif.

93656 Electric Cord Co.
Caldwell, N. J.




| SYM | REVISION | DATE |
|---|---|---|
| | PILOT RUN APPR. | |
| P | PRODUCTION APPR. | |
| C | ECO 1332 MF | |
| D | ECO 1348 MF | |
| E | ECO 1418 MF | |
| F | ECO 1476 MF | |
| G | ECO 534 RR | |
| H | ECO 1538 RR | |
| I | ECO 1826 RR | |
| J | ECO 1808 DR | |
| K | ECO 1813 MF | |
| L | ECO 1841 DDL | |
| M | ECO 2800 | |
| N | " 2854 | |
| O | " 3130 | |
| P | " 3666 | |
| Q | 4266 | |

| HIGHEST REFERENCE DESIGNATIONS | |
|---|---|
| R148, R215 | C117, C207 |
| D106, D209 | Q8 |
| V2 | B5 |
| J3 | T3 |
| DS-1 | F1 |
| REFERENCE DESIGNATIONS NOT USED | |

NOTE

1. UNLESS OTHERWISE SPECIFIED ALL CAPACITORS IN MFDS & ALL RESISTANCES IN OHMS.
2. pF = MICROMICROFARAD
   K = 1,000
   M = 1,000,000
3. ○ FRONT PANEL ADJ.
   ⊘ INTERNAL ADJ.
4. STANDARD MODEL 503C IS SUPPLIED WITH A HI LIMIT ADJ. CONTACT & SPDT RELAY AT K1.
5. VOLTAGES ARE MEASURED FROM CHASSIS GND WITH A 100M VTVM. RANGE SWITCH (S-2) AT CAL, OPERATE-ZERO SWITCH (S-1) AT ZERO. LINE VOLTAGE 117 VAC
6. * NOMINAL (252-352)

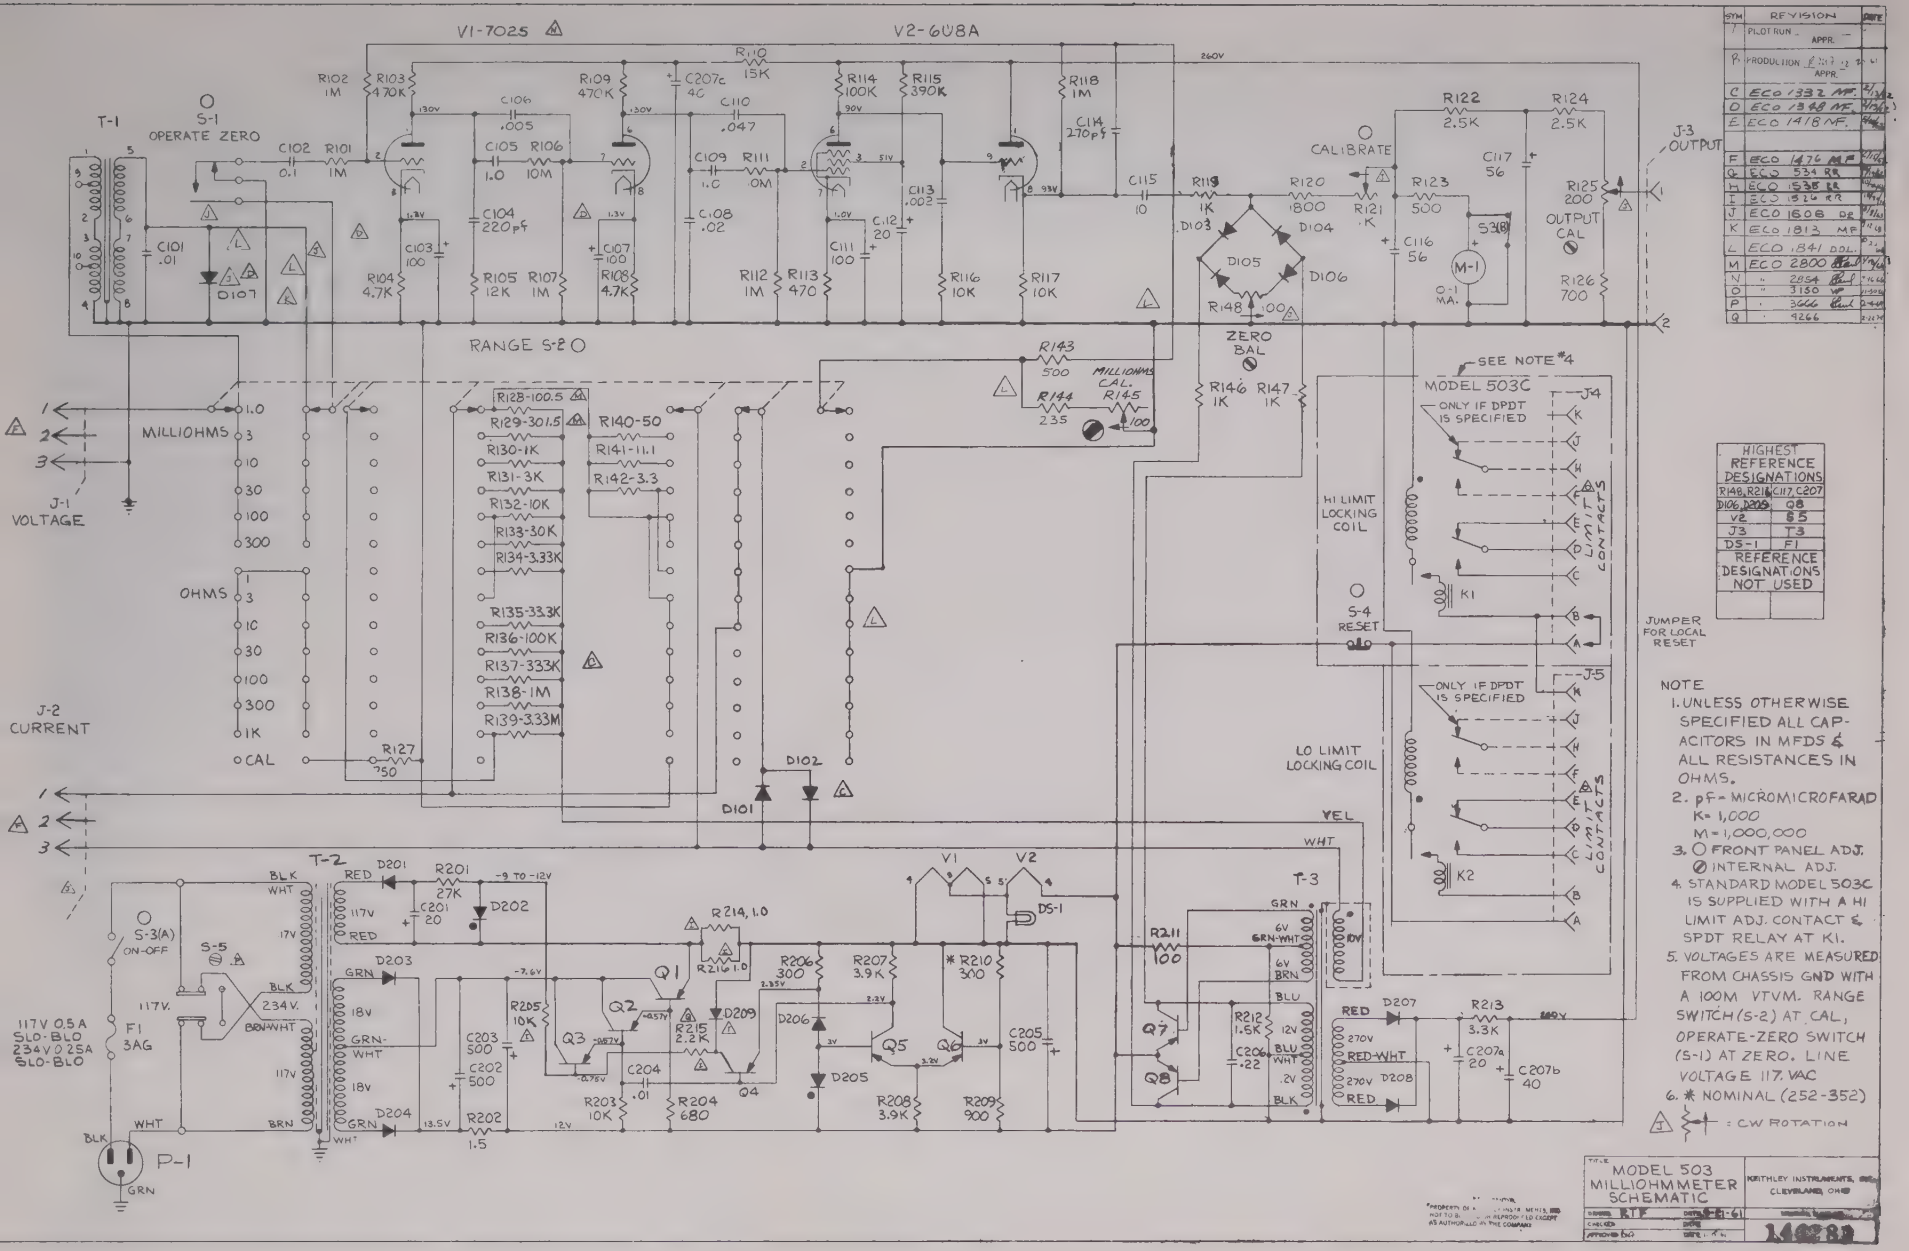: CW ROTATION

PROPERTY OF KEITHLEY INSTRUMENTS, INC. NOT TO BE REPRODUCED EXCEPT AS AUTHORIZED BY THE COMPANY

TITLE: MODEL 503 MILLIOHMMETER SCHEMATIC

KEITHLEY INSTRUMENTS, INC. CLEVELAND, OHIO

DRAWN RTF DATE 7-8-61

CHECKED DATE

APPROVED DATE

14689

KEITHLEY

**Keithley Instruments, Inc.**/28775 Aurora Road/Cleveland, Ohio 44139/(216) 248-0400/Telex: 98-5469
**Keithley Instruments GmbH**/Heiglhofstrasse 5/D-8000 Munchen 70/(089) 714-40-65/Telex: 521 21 60
**Keithley Instruments, Ltd.**/1, Boulton Road/GB-Reading, Berkshire RG2 ONL/(0734) 86 12 87
**Keithley Instruments SARL**/44, Rue Anatole France/F-91121 Palaiseau Cedex/01-014-22-06/Telex: (842) 204188